



## БМС-19125.БМС-19140.БМС-19160

NO.	DESCRIPTION	NO.	DESCRIPTION
1	UPPER DRUM	40	BEARING 6202
2	RUBBER GASKET	41	BOLT M6X12
3	LOWER DRUM	42	CIRCLIP 15
4	MIXING BLADE	43	CIRCLIP 42
5	BIG COGWHEEL	44	LOCK NUT M8
6	DRIVE PINION	46	ROUNDWIRE SNAP RINGS FOR SHAFT 42
7	DRIVE SHAFT	47	BOLT M8X65
8	SUPPORT ARM	48	CIRCLIP 38
9	TIPPING WHEEL	49	BOLT M10X60
10	LOCKING PLATE	50	SPRING FOR TIPPING WHEEL
12	BEARING BLOCK - LEFT	51	CROSS HEADED SCREW M8X16
13	BEARING BLOCK - RIGHT	52	FLAT WASHER 27
14	FRAME	53	SLEEVE
17	SUPPORT LEG	59	SCREW ST3.5*16
18	AXLE BRACKET	60	SWITCH
19	WHEEL	61	GASKET FOR SWITCH
20	GEAR GUARD - I (NOT FOR БМС-19125)	62	STRAIN RELIEF BOLT
21	GEAR GUARD - II (NOT FOR БМС-19125)	63	POWER CORD
22	WATERPROOF WASHER	64	STRAIN RELIEF NUT
23	COTTER PIN 5X40	65	STRAIN RELIEF RUBBER
24	BOLT M8X70	66	STRAIN RELIEF INNER NUT
25	FLAT WASHER 8	67	BOLT M8X30-8.8
26	SPRING WASHER 8	68	MOTOR MOUNT BRACKET
27	NUT M8	69	GASKET FOR MOTOR COVER
28	BOLT M8X20	70	CIRCLIP FOR HOLE 47
29	FLAT WASHER 10	71	ROUNDWIRE SNAP RINGS FOR SHAFT 30
30	SPRING WASHER 10	72	BEARING 6906
31	NUT M10	73	END PLATE
32	BOLT M8X16	74	SCREW ST4.8*16
33	CROSS COUNTERSUNK HEAD SCREW M8X12	75	BELT
34	BEARING 6206	76	IDLE PULLEY
35	CIRCLIP FOR HOLE 62	77	MOTOR
36	CIRCLIP 30	78	FAN
37	ADJUST WASHER	79	MOTOR COVER (PLASTIC)
38	DUSTPROOF COVER		
39	SPRING PIN		

SO20131129