



AG9020CL

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	27	BEARING 609-2Z
2	INNER FLANGE	28	PRESSURE PLATE FOR BEARING
3	QUICK-CHANGE WRENCH SUBASSEMBLY	29	M4*8 CRUCIFORM HEAD SCREW
4	QUICK-CHANGE GASKET	30	WOODRUFF KEY 2.5X10
5	M5 HEX NUT	31	CONNECTING SHAFT
6	Ø4 SPLIT WASHER TYPE E	32	DRIVING DISC
7	PROTECTION COVER	33	ST3*8 TAPPING SCREW
8	OUTPUT SPINDLE	34	FLANGE
9	WOODRUFF KEY 3X10	35	FAN
10	M4*12SCREW+SPRING WASHER+GASKET	36	M5*10 CRUCIFORM HEAD SCREW
11	FRONT COVER	37	LOCATING PLATE
12	BEARING 6001	38	RUBBER CUSHION
13	PRESSURE PLATE FOR BEARING	39	MOTOR
14	M4*8 SCREW	40	ROD INDUCTOR
15	BIG GEAR	41	TAPPING SCREW ST3.5X14
16	WAVE WASHER Ø11	42	TAPPING SCREW ST3.5X16
17	CIRCLIP FOR AXIS Ø10	43	ELECTRIC CONTACT ASSY
18	NEEDLE BEARING HK0810	45	SWITCH TRIGGER
19	CIRCLIP Ø5	46	SPRING 0.6X5.5X17
20	TAPPING SCREW ST3.5*22	47	LOCK-OFF BUTTON
21	HEAD HOUSING	48	SPRING
22	SELF-LOCK SPRING	49	SWITCH
23	SELF-LOCK PIN	50	HOUSING
24	SLIDE BEARING Ø8XØ6X6	51	SIDE HANDLE
25	CIRCLIP FOR AXIS Ø6	52	WRENCH
26	SMALL GEAR	100	WHEEL GUARD

UK-ST20190529