

AG915S ®

	NO.	DESCRIPTION	NO.	DESCRIPTION
	1	DUST COVER	40	SCREW
	2	ALUMINIUM PLATE	41	STOP PIN
O \ A //	3	HEAD HOUSING	42	KEY
POWE	4	NAME PLATE	43	LOCALIED POLE
	5	SCREW	44	BLOCK
	6	CUTSHIFT	45	BRUSH HOLDER COVER
	7	FRONT COVER PLASTIC KNOB	46	BRUSH
	8	SCREW	47	BRUSH HOLDER
	9	SPRING FLANGE	48	SWITCH
	10	FRONT COVER	49	SWITCH COVER
	11	BEARING	50	SINGLE SWITCH
	12	UNDER WASHER	51	ALUNIUM HANDLE
	13	HOLE CHEECKING	53	CLEAN KNOT CONNECTING
	14	GEAR	54	RUBBER KNOT
	15	AXLE CHECKING	55	CONNECTING KNOT
	16	BEARING	56	CLEAN KNOT
	17	MOTOROVVER • G/	57	SCREW-ND O
	18	SCREW	58	ENCIRELE RING
	19	STOP PIN SPRING	59	SCREW
	20	STOP COVER	60	LOWER FLANGE
	21	SCREW NUT	61	CUTTING BLADE
	22	SMALL GEAR	62	ADJUSTING FLANGE
	23	BALL	63	GIBBUSE FLANGE
	24	BEARING	64	"T" SCREW NUT
	25	BEARING COVER	65	UPPER FLANGE
	26	SCREW	66	MANTLE COVER
	27	ROTOR	67	SCREW
	28	BEARING	68	NAME PLATE
	29	BEARING BUSH	69	RUBBER RING
	30	BLOWING GRIDED A N	70	FOURSQUARE SCREW
	31	NET COVER	71	FLANGE
	32	REAR COVER	72	SIDE HANDLE
	33	CORD PLUG	73	SCREW
	34	CORD FLANGE	74	SPRING
	35	SCREW	991	T-WRENCH
	36	CORD FLANGE	992	SPANNER
	37	NAME PLATE	993	HEX WRENCH
	38	HOUSING		
	39	STAOTR		
			<u> </u>	ST20101115-02
				3120101113-02

POWER • GAS • HAND • TOOLS