



## AG9512P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FAN GUIDE	26	OUTPUT SHAFT
2	BEARING HOLDER	27	INNER FLANGE
3	BALL BEARING 627	28	OUTER FLANGE
4	INSULATION WASHER	29	SCREW
5	ROTOR	30	STATOR
6	GEAR HOUSING COVER	31	HOUSING
7	BALL BEARING 6000	32	SWITCH KNOB
8	PINION GEAR	33	NAME PLATE
9	GEAR BOX	34	SWITCH ROD
10	LOCK CAP	35	SWITCH SPRING
11	LOCK SPRING	36	CORD CLAMP
12	SCREW	37	SCREW
13	LOCK PIN	38	SWITCH CAP
14	SIDE HANDLE	39	SWITCH
15	BALL BEARING 607	40	TERMINAL BLOCK
16	CIRCLIPS FOR SHAFT	41	CORD & PLUG
17	BIG GEAR	42	CORD SLEEVE
18	CIRCLIP FOR HOLE	43	REAR COVER
19	BALL BEARING 6201	44	BRUSH CAP
20	FORE COVER	45	CARBON BRUSH
21	SCREW	46	BRUSH HOLDER
22	SCREW	47	INDUCTOR
23	WHEEL COVER	48	CAPACITOR
24	DUSTPROOF PLATE	49	INDUCTOR
25	KEY	50	VARIABLE SPEED CIRCUIT

RU090623-3