



AG9514P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	27	INSULATION WASHER
2	ABRASIVE WHEEL	28	BEARING 627Z
3	INNER FLANGE	29	BEARING COVER
4	SPINDLE	30	FAN GUIDE
5	KEY	31	SCREW
6	ANTI-DUST COVER	32	STATOR
7	WHEEL GUARD	33	SPRING
8	SCREW	34	HOUSING
9	SPRING WASHER	35	LABEL
10	FLAT WASHER	36	CARBON BRUSH COVER
11	FRONT COVER	37	CARBON BRUSH
12	BEARING 6201Z	38	CARBON BRUSH HOLDER
13	CIRCLIP	39	HANDLE ASSEMBLY
14	GEAR	40	SCREW
15	CIRCLIP	41	SCREW
16	BEARING 607Z	43	SWITCH
17	SIDE HANDLE	44	CAPACITOR
18	LOCKING PIN	45	INDUCTOR
19	SCREW	46	CABLE CLAMP
20	SPRING	47	CABLE SLEEVE
21	LOCKING CAP	48	CABLE
22	GEAR BOX	49	SPANNER
23	PINION	50	NUT
24	BEARING 6000Z	51	VARIABLE SPEED SWITCH KNOB
25	GEAR HOUSING COVER	52	VARIABLE SPEED SWITCH
26	ROTOR		

ST20101029

Sturmm!