



## AG9518P AG9524P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	31	ROTOR
2	DISC	32	BEARING 60RZ
3	INNER FLANGE	33	BEARING BUSH
4	GUARD	34	WIND GUARD
5	NUT	35	SCREW
6	SCREW	36	STATOR
7	ANTI-DUST COVER	37	INSERT PIECE
8	SCREW	38	HOUSING
9	SPRING WASHER	39	NAME PLATE
10	FLAT WASHER	40	SCREW
11	FORE COVER	41	CARBON BRUSH HOLDER
12	SPINDLE	42	SCREW
13	KEY	43	SPRING
14	BEARING 6202Z	44	CARBON BRUSH
15	BEARING COVER	45	BRUSH COVER
16	SCREW	46	SOFT START
17	GEAR	47	ROTARY BUTTON
18	CIRCLIP	48	ROTARY SPRING
19	BUSH	49	LEFT HANDLE
20	HANDLE	50	CORD SLEEVE
21	SCREW	51	CORD & PLUG
22	SCREW	52	CORD CLAMP
23	SPRING	53	CAPACITOR
24	LOCK PIN	54	SWITCH
25	GEAR BOX COVER	55	LEFT HANDLE
26	GEAR BOX	56	SCREW
27	ANTI-LOOSE NUT	57	LABEL
28	PINION	58	SPANNER
29	BEARING 6001 Z	59	HEX WRENCH
30	BEARING COVER		

RU090730-1

Sturm!