



## AG9524P<sup>®</sup>

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	31	ROTOR
2	DISC	32	BEARING 608Z
3	INNER FLANGE	33	BEARING BUSH
4	GUARD	34	WIND GUARD
5	NUT	35	SCREW
6	SCREW	36	STATOR
7	ANTI-DUST COVER	37	INSERT PIECE
8	SCREW	38	HOUSING
9	SPRING WASHER	39	NAME PLATE
10	FLAT WASHER	40	SCREW
11	FORE COVER	41	CARBON BRUSH HOLDER
12	SPINDLE	42	SCREW
13	KEY	43	SPRING
14	BEARING 6202Z	44	CARBON BRUSH
15	BEARING COVER	45	BRUSH COVER
16	SCREW	46	SOFT START
17	GEAR	47	ROTARY BUTTON
18	CIRCLIP	48	ROTARY SPRING
19	BUSH	50	CORD SLEEVE
20	HANDLE	51	CORD & PLUG
21	SCREW	52	CORD CLAMP
22	SCREW	53	CAPACITOR
23	SPRING	54	SWITCH
24	LOCK PIN	56	SCREW
25	GEAR BOX COVER	57	LABEL
26	GEAR BOX	58	SPANNER
27	ANTI-LOOSE NUT	59	HEX WRENCH
28	PINION	888	HANDLE ASSEMBLE
29	BEARING 6201Z		
30	BEARING COVER		

ST20101207-01

Sturmi!<sup>®</sup>