



AG9524P[®]

NO.	DESCRIPTION	NO.	DESCRIPTION
1	OUTER FLANGE	31	ROTOR
2	DISC	32	BEARING 608Z
3	INNER FLANGE	33	BEARING BUSH
4	GUARD	34	WIND GUARD
5	NUT	35	SCREW
6	SCREW	36	STATOR
7	ANTI-DUST COVER	37	INSERT PIECE
8	SCREW	39	NAME PLATE
9	SPRING WASHER	40	SCREW
10	FLAT WASHER	41	CARBON BRUSH HOLDER
11	FORE COVER	42	SCREW
12	SPINDLE	43	SPRING
13	KEY	44	CARBON BRUSH
14	BEARING 6202Z	45	BRUSH COVER
15	BEARING COVER	46	SOFT START
16	SCREW	47	ROTARY BUTTON
17	GEAR	48	ROTARY SPRING
18	CIRCLIP	50	CORD SLEEVE
19	BUSH	51	CORD & PLUG
20	HANDLE	52	CORD CLAMP
21	SCREW	53	CAPACITOR
22	SCREW	54	SWITCH
23	SPRING	56	SCREW
24	LOCK PIN	57	LABEL
25	GEAR BOX COVER	58	SPANNER
26	GEAR BOX	59	HEX WRENCH
27	ANTI-LOOSE NUT	888	HOUSING ASSEMBLY
28	PINION		
29	BEARING 6201Z		
30	BEARING COVER		

ST20101207-01

Sturmi![®]