



## AG9524P

| NO. | DESCRIPTION             | NO. | DESCRIPTION         |
|-----|-------------------------|-----|---------------------|
| 1   | OUTER FLANGE            | 31  | ROTOR               |
| 2   | DISC                    | 32  | BEARING 608Z        |
| 3   | INNER FLANGE            | 33  | BEARING BUSH        |
| 4   | GUARD                   | 34  | WIND GUARD          |
| 5   | NUT                     | 35  | SCREW               |
| 6   | SCREW                   | 36  | STATOR              |
| 7   | ANTI-DUST COVER         | 37  | INSERT PIECE        |
| 8   | SCREW                   | 38  | HOUSING             |
| 9   | SPRING WASHER           | 39  | NAME PLATE          |
| 10  | FLAT WASHER             | 40  | SCREW               |
| 11  | FORE COVER              | 41  | CARBON BRUSH HOLDER |
| 12  | SPINDLE                 | 42  | SCREW               |
| 13  | KEY                     | 43  | SPRING              |
| 14  | BEARING 6202Z           | 44  | CARBON BRUSH        |
| 15  | BEARING COVER           | 45  | BRUSH COVER         |
| 16  | SCREW                   | 46  | SOFT START          |
| 17  | GEAR                    | 47  | ROTARY BUTTON       |
| 18  | CIRCLIP                 | 48  | ROTARY SPRING       |
| 19  | NEEDLE BEARING HK101610 | 50  | CORD SLEEVE         |
| 20  | HANDLE                  | 51  | CORD & PLUG         |
| 21  | SCREW                   | 52  | CORD CLAMP          |
| 22  | SCREW                   | 53  | CAPACITOR           |
| 23  | SPRING                  | 54  | SWITCH              |
| 24  | LOCK PIN                | 56  | SCREW               |
| 25  | GEAR BOX COVER          | 57  | LABEL               |
| 26  | GEAR BOX                | 58  | SPANNER             |
| 27  | ANTI-LOOSE NUT          | 59  | HEX WRENCH          |
| 28N | PINION                  | 888 | HANDLE ASSEMBLE     |
| 29  | BEARING 6201Z           |     |                     |
| 30  | BEARING COVER           |     |                     |

ST20120522-03

Sturmi!