



AG952P1

NO.	DESCRIPTION	NO.	DESCRIPTION
1	WIND BAFFLE	27	GRINDING WHEEL
2	BEARING BUSH	28	OUT FLANGER
3	BEARING 6000-2RS	29	WOODRUFF KEY
4	DUSTPROOF BUSH	30	ASSISTANT HANDLE
5	ROTOR	31	TAPPING SCREW
6	FLAT WASHER	32	STATOR
7	SCREW	33	NAMEPLATE
8	BEARING LID	34	TAPPING SCREW
9	BEARING 6202-2RS	35	CARBON BRUSH CAP
10	PINION	36	HOUSING
11	NUT	37	CARBON BRUSH
12	TAPPING SCREW	38	BRUSH RACK
13	GEARBOX	39	TORSIONAL SPRING
14	BEARING	41	SWITCH
15	NUT	43	TAPPING SCREW
16	GEAR 6203#	44	CABLE CLAMP
17	BEARING 6202-2RS	45	CABLE SLEEVE
18	WOOL WASHER	46	CABLE CORD
19	PAPER WASHER	47	CAPACITANCE
20	GEARBOX COVER	48	TAPPING SCREW
21	SPRING WASHER	49	TAPPING SCREW
22	SCREW	50	WRENCH
23	SCREW	51	WRENCH
24	WHEEL GUARD	888	HANDLE ASSEMBLE
25	OUTPUT SHAFT		
26	INNER FLANGER		

ST20101207-01