

AG9823FP

NO.	DESCRIPTION	NO.	DESCRIPTION
1	STATOR	30	END COVER
2	AIR DEFLECTOR	31	WASHER 5
3	BEARING BUSHING	32	SELF-TAPPING SREWM5X15
4	WASHER 26	33	HEX SCREW M8*30
5	BEARING 6000-2RS	34	SPRING WASHER 8
6	DUST COVER	35	WASHER 8
7	ARMATURE	36	NUT M8
8	BEARING PLATE 18	37	WHEEL GUARD
9	BEARING 6301-2RS	38	INNER FLANGE
10	WASHER 37	39	GRINDING DISK
11	WOOL WASHER 18.5*33	40	OUTER FLANGE
12	WASHER 18.5*33	41	SCREW ST4.8*75
13	PINION GEAR	42	HOUSING
14	NUT M10	43	LABEL
15	GEAR CASE	44	BRUSH HOLDER
16	BUTTON	45	SPRING
17	SPRING	46	SCREW ST4.2*16
18	RETAINING RING 7	47	CARBON BRUSH
19	SPRING WASHER 5	48	BRUSH CAP
20	SELF-TAPPING SREWM5X12	49	CAPACITANCE
21	SCREW ST4.8*35	50	SCREW ST4.2*13
22	ASSISTANT HANDLE	51	CORD CLIP
23	BEARING 6000-2Z	53	CORD
24	BEVEL GEAR	54	CORD HOLDER
25	AXLE	55	SWITCH
26	SCREW M5*10	57	SCREW ST3.5X16
27	BEARING PLATE 33	58	SOFT START PCB
28	BEARING 6302-2RS	888	HANDLE ASSEMBLE
29	WOOL WASHER 20*35		

ST20120720

