



BB5223

BB5223

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW	39	BRUSH	77	BIG WASHER	115	PRESS CLAW CONNECTING BAR
2	PLAIN WASHER	40	BELT	78	COLUMN COMPRESSING SPRING	116	SQUARE WASHER
3	UNITE PAGE	41	BELT WHEEL(II)	79	ADJUSTING KNOB	117	MOVING PRESS CLAW
4	COVER	42	SMALL BELT	80	MICO-ADJUSTING KNOB	118	COLUMN COMPRESS SPRING
5	NUT	43	BELT WHEEL(I)	81	SWITCH FACEPLATE	119	SQUARE WASHER
6	CLIP REED	44	DRIVEN SHAFT	82	SCREW	120	LOCK NUT
7	PRESS BOARD	45	ECCENTRICITY SHAFT	83	NUT	121	PLAIN WASHER
8	SCREW	46	TIGHTEN KNOB	84	CORD SLEEVE	122	CIRCLIP
9	LOCK BUTTON	47	WASHER	85	CORD	123	TEETH WASHER
10	SAW BLADE	48	SPRING SEAT	86	SCREW		
11	CIRCLIP	49	COLUMN COMPRESSING SPRING	87	SPRING WASHER		
12	BEARING	50	BODY	88	TOOTH WASHER		
13	DRIVEN WHEEL	51	BASE	89	TAKE-UP		
14	UPPER PROTECTING BOARD(II)	52	WASHER	90	RELAY CORD		
15	DRIVING WHEEL	53	PLAIN WASHER	91	FIXUP KNOB		
16	BOLT	54	BOLT	92	RUBBER WASHER		
17	RISE DOWN BLOCK	55	DOWN PROTECTING COVER	93	ANGLE GUIDE		
18	GEAR	56	NUT	94	OBSERVE MIRROR		
19	BEARING	57	INDICATOR	95	SCREW		
20	SMALL SHAFT	58	DOWN PROTECTING BOARD	96	MICO-SWITCH COVER		
21	POSITION BLOCK(I)	59	BOLT	97	MICO-SWITCH		
22	SCREW	60	CAPACITOR	98	TAPPING SCREW		
23	POSITION BLOCK(II)	61	CAPACITOR COVER	99	MICO-SWITCH COVER BOARD		
24	BRACKET	62	ANGLE SEAT	100	TAPPING SCREW		
25	SCREW	63	WASHER	101	DUST CONNECTOR		
26	UPPER PROTECTING COVER	64	FIXUP KNOB	102	SCREW		
27	SPRING WASHER	65	NUT	103	RIVET		
28	UPPER PROTECTING BOARD(I)	66	DISHING NUT	104	FAN COVER		
29	ADJUST BLOCK(I)	67	FLAT ROUND SCREW	105	LOCKNUT		
30	SCREW	68	SCREW	106	COLUMN COMPRESSING SPRING(I)		
31	SCREW	69	WORK TABLE	107	BIG PLAIN WASHER		
32	WASHER	70	GUIDE ROD	108	POTHOOK		
33	DRIVEN SHAFT	71	COMPACTION KNOB	109	PUSH ROD		
34	ADJUST BLOCK(II)	72	SPRING PIN	110	CONNECTION THREAD BAR		
35	SPRING PIN	73	TABLE INSERT	111	BIG WASHER		
36	MAGNETIC SWTICH	74	BOLT	112	FIXUP PRESS CLAW		
37	SWITCH BORAD	75	MOTOR	113	GUIDE BAR		
38	SCREW	76	FIXUP KNOB	114	BOLT		

RU609201