



## BS52231

NO.	DESCRIPTION	NO.	DESCRIPTION
1	MAIN COVER	34	RETAINING RING
2	BLADE SAW	35	SPRING HOLDER
3	LOWER WHEEL	36	SPRING
4	SCREW	37	SPRING HOLDER
5	SPRING WASHER	38	GUIDING STAND
6	WASHER	39	TABLE INSERT
7	BRISTLE BRUSH	40	TABLE
8	SCREW	41	SCREW
9	GUIDE HOLDER	42	WASHER
10	BLADE GUARD	43	KNOB
11	PROTECTING SWITCH ASSEMBLY	44	NUT
12	RUBBER RING	45	KNOB
13	CONDUCTOR ANCHORAGE	46	SPRING
14	MAIN SWITCH ASSEMBLY	47	CLAMP SCREW
15	TAPPING SCREW	48	STAIN RELIEF
16	FIXED GUARD	49	CORD SLEEVE
17	REMOVABLE GUARD	50	CONNECTION BOX
18	GUIDE HOLDER	51	AC-CORD & PLUG
19	BACK BEARING	52	CABLE BUSHING
20	SNAP RING	53	WASHER
21	SQUARE NECK NUT	54	SPRING WASHER
22	GUIDE SLIDING BRACKET	55	SCREW
23	ADJUSTMENT GEAR	56	ANGLE HOUSING
24	SNAP RING	57	WASHER
25	BEARING	58	ANCHORAGE GEAR ARBOR
26	RETAINING RING	59	OPERATION HANDLE
27	UPPER WHEEL	60	SPRING
28	BEARING	61	BOLT
29	HEX HEAD SCREW	62	ANGLE GUIDE
30	CLAMP PLATE	63	MOTOR ASSEMBLY
31	WHEEL SLIDING BRACKET	64	PIN
32	KNOB	65	BASE AND FRAME
33	COVER INSERT		