



BP8720

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW M5X20	31	CRANK SHAFT COMP.	61	SEALING WASHER
2	WASHER 5	32	KEY	62	MUFFLER COMP.
3	SCREW M5X50	33	NEEDLE BEARING	63	MUFFLER COVER
4	CORD GROMMET	34	PIN B5X12	64	WASHER 6
5	STARTER	35	FRONT HALF CRANKCASE	65	SCREW M6X60-12.9
6	STARTER HANDLE	36	WASHER 5	66	CYLINDER SHROUD
7	PIPE	37	SCREW M5X30	67	SCREW M5X20
8	NUT M5	38	CHASSIS	68	FUEL TANK
9	STARTER COVER ASS'Y	39	WASHER 6	69	SEALING WASHER
10	RECOIL SPRING	40	BOLT	70	FILTER NET
11	ROPE	41	CLUTCH SPRING	71	INNER LID
12	STARTER ROPE REEL	42	CLUTCH SHOE	72	CLEANER ELEMENT
13	STARTER REEL	43	WASHER	73	INNER LID
14	WASHER	44	CLUTCH STEP SCREW	74	FUEL TANK CAP
15	ROPE GUIDE	45	RUBBER WASHER	75	INNER WASHER
16	PRESS SPRING	46	SUPPORT	76	AIR INLET VALVE
17	WASHER	47	SCREW M5X14	77	OUTER WASHER
18	SCREW M5X12	48	BOLT M6X12	78	INLET MANIFOLD
19	SCREW M6X16-10.9	49	BOLT M5X10	79	SEALING WASHER
20	WASHER	50	SUPPORT	80	CARBURETOR ASS'Y
21	FLYWHEEL	51	PISTON RING CIRCLIP	81	SCREW M5X58
22	RUBBER WASHER	52	PISTON PIN	82	CLICK RING
23	OIL SEAL	53	PISTON	83	FUEL PIPE
24	SCREW M6X14	54	PISTON RING	84	CLEANER SHROUD
25	WASHER 6	55	CYLINDER WASHER	85	CLEANER ELEMENT(-)
26	SUPPORT	56	CLICK SPRING	86	CLEANER SHROUD
27	REAR HALF CRANKCASE	57	PLUG CAP	87	CLEANER ELEMENT(+)
28	IGNITION	58	PLUG	88	SCREW M5X25
29	BALL BEARING 6202/P4	59	SCREW M6X20	89	STOP WIRE
30	TANK CAP GASKET	60	CYLINDER		

RU100104-2

Sturmm!