



Sturm!
POWER • GAS • HAND • TOOLS

BP8750GV

NO.	DESCRIPTION	NO.	DESCRIPTION
1	PUMP BODY	23	WHEEL AXIS
2	O RING	24	WHEEL
3	PLUG KNOB	25	WASHER
4	T SCREW	26	SPRING WASHER
5	O RING	27	NUT
6	CHECK VALVE	28	3" HOSE WRENCH
7	IMPELLER GUIDE	29	3" HOSE JOINT
8	IMPELLER	30	WASHER
9	COLUMN PIN	31	PULL BAR
10	O RING	32	NUT
11	O RING	33	STRAINER
12	PUMP COVER	34	LID
13	MACHINERY SEALING	35	BOLT
16	BRACKET	36	CLAMP
17	NUT	37	NUT
18	FLAT WASHER	38	SPRING WASHER
19	SPRING WASHER	39	WASHER
20	RUBBER FOOT	40	BOLT
21	BOLT	41	SUPPORT BRACKET
22	ENGINE	42	RUBBER FOOT

ST20130927

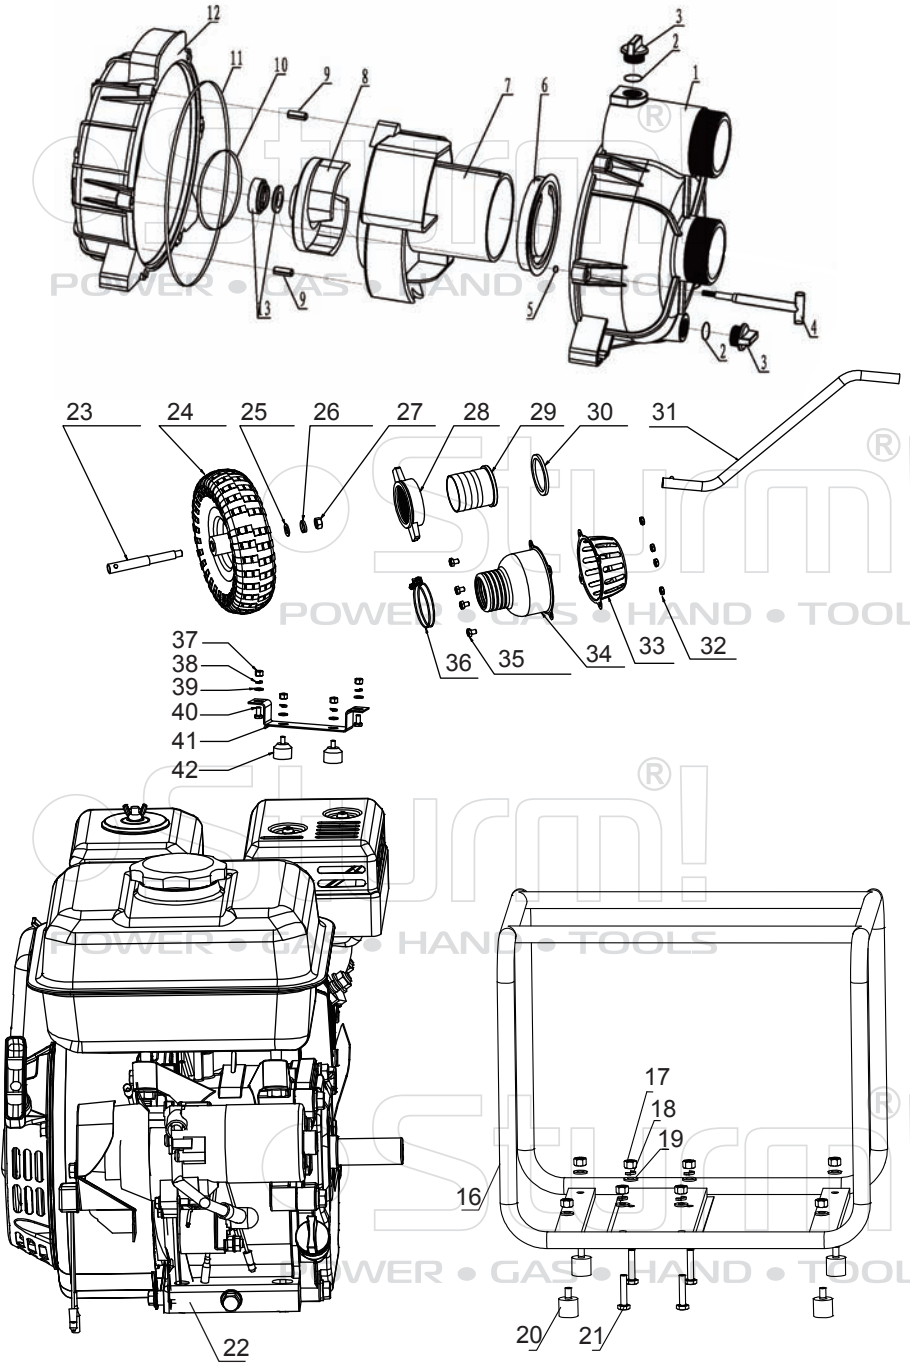

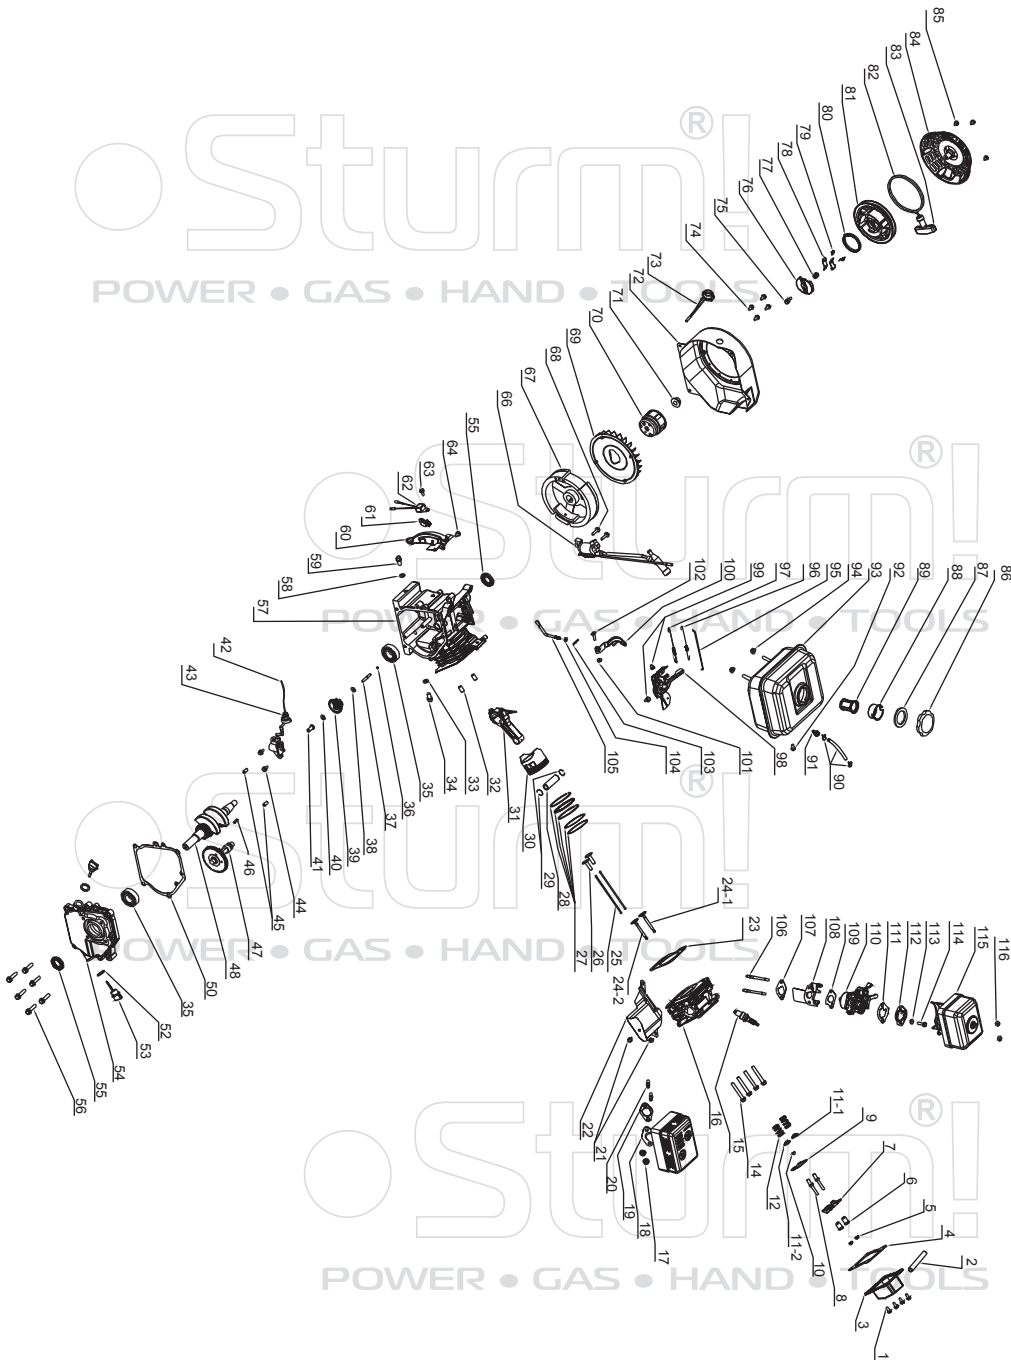

ENGINE FOR BP8750GV

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	BOLT	39	GOVERNOR WEIGHT HOLDER COMP	81	RECOIL STARTER REEL
2	VENT-PIPE	40	GOVERNOR HOLDER CLIP	82	RECOIL STARTER ROPE
3	HEAD COVER COMP	41	GOVERNOR COVER	83	RECOIL STARTER KNOB
4	HEAD COVER PACKING	42	NUT	84	RECOIL STARTER COMP
5	PIVOT ADJUSTING NUT	43	OIL SENSOR ASSEMBLY	85	FLANGE BOLT M6×8
6	ROCKER ARM PIVOT	44	BOLT	86	FUEL TANK CAP
7	VALVE ROCKER ARM	45	FIXED PIN	87	SEALING RING
8	PIVOT BOLT	46	WOODRUFF KEY	88	STEEL BUSH
9	PUSH ROD GUIDE PLATE	47	CAMSHAFT ASSEMBLY	89	FILTER
10	VALVE ROTATOR	48	CRANKSHAFT ASSEMBLY	90	FUEL TUBE
11-1	EXHAUST VALVE SPRING RETAINER	50	PAPER GASKET	91	FUEL NUZZLE
11-2	INTAKE VALVE SPRING RETAINER	52	OIL FILLER CAP PACKING	92	BOLT
12	VALVE SPRING	53	OIL FILLER CAP ASSEMBLY	93	FUEL TANK
14	FLANGE BOLT M8×55	54	CRANKCASE COVER	94	NUT
15	SPARK PLUG	55	OIL SEAL	95	GOVERNOR ROD
16	CYLINDER HEAD COMP	56	BOLT	96	GOVERNOR SPRING
17	NUT	57	CRANKCASE	97	THROTTLE RETURN SPRING
18	MUFFLER COMP	58	DRAIN BOLT WASHER	98	GOV.SETTING COMP.
19	WASHER	59	DRAIN PLUG BOLT	99	BOLT
20	STUD BOLT	60	FLYWHEEL GUARD	100	GOVERNOR ARM
21	BOLT	61	CLIP	101	NUT
22	WIND FENDER	62	DIODE COMP	102	BOLT
23	CYLINDER HEAD GASKET	63	BOLT	103	LOCK PIN
24-1	INTAKE VALVE	64	BOLT	104	WASHER
24-2	EXHAUST VALVE	66	IGNITOR COMP	105	GOVERNOR ARM SHAFT
25	PULL ROD	67	FLYWHEEL	106	STUD BOLT
26	VALVE LIFTER	68	BOLT	107	WASHER
27	PISTON RING ASSEMBLY	69	COOLING FAN	108	CARBURETOR INSULATOR
28	PISTON PIN	70	START HUB	109	CARBURETOR PACKING
29	PISTON PIN CLIP	71	NUT	110	CARBURETOR ASSEMBLY
30	PISTON	72	FAN COVER COMP	111	CARBURETOR PACKING
31	CONNECTING ROD COMP	73	ENGINE SWITCH COMP	112	CARBURETOR WASHER
32	FIXED PIN	74	BOLT	113	NUT
33	DRAIN BOLT WASHER	75	SETTING SCREW	114	BOLT
34	DRAIN PLUG BOLT	76	RATCHET GUIDE	115	AIR CLEANER GENERAL ASSY.
35	BEARING 6205	77	RATCHET GUIDE SPRING	116	NUT
36	CIRCLIP	78	STARTER RATCHET		
37	GOVERNOR SHAFT	79	RETURN SPRING		
38	GOVERNOR HOLDER CLIP	80	SPRING		

ST20130927