



## BS8511P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW	36	CHECK RING
2	SPRING WASHER	37	FLAT KEY
3	PLAIN WASHER	38	BIG GEAR
4	REAR DAMPER	39	NEEDLE BEARING HK161812
5	DUST HOOD	40	HOUSING
6	SCREW	41	SWITCH
7	SPRING WASHER	42	ANNULAR DAMPER
8	IMPELLER	43	BEARING 6801Z
9	TAPPING SCREW	44	WASHER
10	MIDDLE BRACKET	45	REAR WHEEL
11	BEARING 6200	46	SAND BELT
12	ROTOR	47	SCREW
13	DAMPER	48	FRONT COVER
14	PLAIN WASHER	49	SCREW
15	SMALL BELT WHEEL	50	ADJUSTING KNOB
16	WIND SCREEN	51	PLAIN WASHER
17	SCREW	52	ADJUSTING SPRING
18	STATOR	53	SCREW
19	HEX NUT	54	NEEDLE BEARING BK0810
20	HANDLE COVER	55	SHAFT GEAR
21	CABLE SLEEVE	56	SPRING
22	TAPPING SCREW	57	FRONT-WHEEL FRAME
23	CABLE CLAMP	58	WASHER
24	PLASTIC HOUSING	59	FRONT-WHEEL
25	SCREW	60	COLUMN PIN
26	BRUSH HOLDER	61	FRONT-WHEEL AXIS
27	CARBON BRUSH	62	BOTTOM PLATE
28	BRUSH CAP	63	LATEX CUSHION
29	SCREW	64	BOTTOM PLATE
30	BELT COVER	65	BAFFLE
31	IRON PIPE	66	RIVET
32	BELT	67	SCREW CAP
33	SCREW	68	WASHER
34	BIG BELT WHEEL	69	CABLE & PLUG
35	HOUSING COVER	70	REAR WHEEL AXIS

RU60530-1