



BS8512

NO.	DESCRIPTION	NO.	DESCRIPTION
1	TAPPING SCREW	39	PRESSURE SPRING
2	SOFT GRIP	40	FRONT WHEEL FRAME
3	HAND COVER	41	NUT M12
4	CAPACITOR	42	REAR ROLLER
5	INDUCTOR	43	BEARING 6200
6	SWITCH	44	MOTOR RACK
7	ANCHORAGE	45	SCREW M4X16
8	TAPPING SCREW	46	BUSH
9	CABLE SLEEVE	47	REAR WHEEL AXIS
10	CABLE	48	BIG GEAR
11	HOUSING	49	GEAR BOX COVER
12	SMALL BELT WHEEL	50	SCREW M4X12
13	BELT COVER	51	BIG BELT WHEEL
14	SCREW M4X12	52	NUT M8
15	CARBON BRUSH	53	BELT
16	CARBON BRUSH HOLDER	54	BEARING 6001
17	BRUSH HOLDER COVER	55	SHAFT GEAR
18	STATOR	56	NEEDLE BEARING
19	TAPPING SCREW	57	NAME PLATE
20	BEARING 6000	58	SCREW M5X8
21	INSULATE WASHER	59	ADJUSTING KNOB
22	WIND GUARD	60	PLAIN WASHER 16
23	ROTOR	61	HANDLE COVER
24	BEARING 6000	62	HANDLE
25	MIDDLE BRACKET	63	SCREW M4X12
26	TAPPING SCREW	64	ADJUSTING SPRING
27	FAN	65	TAPPING SCREW
28	SCREW M5X12	66	SCREW M4X10
29	FAN COVER	67	BOTTOM PLATE
30	DUST OUTLET	68	RUBBER CUSHION
31	SEAL RING	69	FIXING PIN
32	BORDER COVER	70	TAPPING SCREW
33	TAPPING SCREW	71	BAFFLE
34	NAME PLATE	72	SPRING WASHER
35	SANDING BELT	73	FRONT ROLLER
36	SCREW M4X12	74	NEEDLE BEARING
37	FRONT COVER	75	WASHER 18
38	FRONT WHEEL DRIVE AXIS		

RU5111401