



BS8512P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	NAMEPLATE TRADEMARKS	36	GEAR BOX COVER
2	SCREW M4X40	37	BEARING 6200
3	SCREW ST4.2X45	38	CIRCLIP FOR SHAFT 12
4	CASING COVER	39	GEAR
5	AN OUTLET PIPE	40	GEAR SHAFT
6	"O" RING 28X1.9	41	KEY 4X4X8
7	DUST COVER	42	AFTER THE SHAFT
8	SCREW M5X16	43	BEARING HK0810
9	SCREW ST4.2X16	44	COPPER BUSH Ø15XØ21X14
10	ALUMINUM FAN BLADE	45	BEARING HK1512
11	CENTER COVER	46	RACK
12	BEARING 6000	47	BEARING 6001
13	ARMATURE	48	THE REAR WHEEL
14	BREAK WIND RING	49	NUT M12-LEFT
15	SCRAPER SEAL	50	PRESSURE SPRING
16	SCREW ST5X45	51	THE FRONT WHEEL RACK
18	STATOR	52	FRONT COVER
19	HOUSING	53	ABRASIVE BELT
20	CAPACITANCE	54	FRONT WHEEL RACK TORSION SPRING
21	SCREW ST4.2X14	55	THE FRONT WHEEL DRIVER SHAFT
22	CORD CLIP	56	THE FRONT WHEEL
23	SWITCH	57	PORCELAIN PLATE
24	RUBBER SLEEVE	58	BULKHEAD
25	CORD	59	SCREW M5X10
26	SMALL PULLEY	60	FLAT WASHER Ø12.1XØ24X0.5
27	BELT WHEEL COVER PANEL	61	FLOOR LAYERING
28	BELT WHEEL COVER	62	GRAPHITE CLOTH BOTTOM
29	SCREW M4X14	63	CYLINDRICAL PIN SCREW M6XØ5X38
30	CARBON BRUSH	64	RUBBER MAT
31	CARBON BRUSH CAP	65	ADJUST THE SPRING
32	BRUSH HOLDER	66	FLAT WASHER Ø16XØ22X0.5
33	DRIVING BELT	67	ADJUST THE HANDWHEEL
34	NUT M10	68	THE FRONT HANDLE
35	BIG PULLEY	69	THE FRONT HANDLE COVER

ST20160512