



BS8580

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SWITCH	32	BEARING 626
2	INDUCTANCE	33	CLOSE OVER
3	CAPACITOR	33-1	NUT
4	CORD AND PLUG	34	REAR WHEEL
5	SCREW	35	FRONT-WHEEL DRIVE AXIS
6	CORD CLAMP	36	FRONT-WHEEL
7	CORD SLEEVE	37	FRONT-WHEEL FRAME
8-1	PLAIN WASHER	38	ORIENTATION MELT
9	NUT	38-1	REAR WHEEL AXIS
10	BIG GEAR	39	SPRING
11	COLUMN MELT Ø3	40	FRONT-COVER
12	RETAINING	41	SANDING BELTS
13	SHAFT GEAR	42	LATEX CUSHION
14	BEARING 608	43	BOTTOM PLATE
15	DUST SUCTION COVER	44	DUST SUCTION SUPPORT
16	NAME PLATE	45	DUST BAG
17	SCREW ST4.8X18	46	SCREW
18	FAN	47	BELT COVER
19	COVER BOARD	48	BELT
20N	BIG-BELT-WHEEL(26TEETH)	49N	SMALL-BELT-WHEEL(12TEETH)
20-1	PLAIN WASHER	50	BEARING 608Z
21	ADJUST-NUT	51	STATOR
22	ADJUST SPRING	52	ROTOR
22-1	WASHER	54	NEEDLE BEARING
23	BRUSH HOLDER COVER	55	SCREW ST4.8X20
24	CARBON-BRUSH HOLDER	56	SCREW
24-1	NAMEPLATE	57	SCREW M5X40
25	CARBON-BRUSH	58	INSULATE WASHER
26	SCREW	60	BEARING SEAT
28	BAFFLE	61	SCREW
29	BEARING 6000	62	PLAIN WASHER
30	OIL BEARING	63	SCREW M5X10
31	RING WASHER	888	HOUSING ASSEMBLE

ST20150831-02