



Engine for BT89314

No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
3A	OUTSIDE COVER	37	SECOND PISTON RING	72	SCREW M5X50
4A	FILTER NET	38	FIRST PISTON RING	73	SCREW M5X16
5A	NUT M5	39	CYLINDER	74	CYLINDER COVER
6A	BAFFLER	40	ADMITTING GASKET	75	MUFFLE COVER
7A	SCREW ST4.2X12-F-H	41	SCREW M5X75	76	FLY WHEEL COVER
8A	CHOKE	42	ADMITTING PIPE	77	COIL
9A	INSIDE COVER	43	BOARD	78	FLY WHEEL
10	CHOKE HANDLE	44	SCREW M5X8	79	PARKING
11	WINDPIPE	45	GASKET	80	NUT
12A	STARTER	46	CARBURETOR	81	GASKET
13A	SEAL	47	O RING 5X2.65	83	EXPANDER
15	SCREW M5X20	48	SPARK PLUG	84	WASHER
16A	START REEL	51	CYLINDER COVER	85	SCREW PIN
17A	FAN	52	SCREW M5X25	86	FUEL PIPE
18	GRANK SHAFT	53	CYLINDER COVER GASKET	87	PLUG
19	DIPSTICK	54	ROCKER PIN	88	FUEL PIPE
20	SEAL	55	ROCKER	89	CLEANER
21	SCREW M5X16	56	ADJUST NUT	90	FUEL TANK
22	SCREW M3X8	57	JIB SEAT	91	CHAIN
23	SCREW M5X55	58	SPRING SEAT	92	END COVER
24	BOARD	59	SPRING	93	INSIDE COVER
25	BOARD	60	INPUT VALVE	94	INLET
26	REED	61	OUTPUT VALVE	95	GASKET
27	GRANK CASE	62	BELOW ROCKER	96	FUEL TANK LID
28	PIN B4X8	63	JIB	97	FIRE SIGN
29	OIL SIGN	64	PIN	98	FUEL TANK BRACKET
30	SIGN	65	COVER	99	GEAR
31	SEAL	66	SCREW M4X16	100	BEARING 6201
32	KEY 3X5X13	67	BOARD	101	BEARING 6002
33	PISTON	68	CAM WHEEL	102	OIL FORK RING
34	PISTON PIN	69	BOARD	103	CRANK ASSEMBLY
35	RING	70	SCREW M5X8		
36	OIL RING	71	MUFFLE		

ST20121030-02