



CC9916

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|-------------------|-----|------------------|
| 1 | LABEL | 31 | OIL TUBE |
| 2 | NUT | 32 | L OIL TUBE |
| 3 | PRESSURE BUSH | 33 | BEARING 608-2RS |
| 4 | CHAIN WHEEL COVER | 34 | ROTOR |
| 5 | CHAIN BAR SHIELD | 35 | BEARING 607-2RS |
| 6 | SAW CHAIN | 36 | BEARING BUSH |
| 7 | CHAIN BAR | 37 | WIND DEFENDER |
| 8 | CIRCLIP Ø10MM | 38 | TAPPING SCREW |
| 9 | WASHER | 39 | STATOR |
| 10 | CHAIN WHEEL | 40 | OIL BOTTLE |
| 11 | TAPPING SCREW | 41 | BREATH MOUTH |
| 12 | TAPPING SCREW | 42 | WASHER |
| 13 | TAPPING SCREW | 43 | BOTTLE CAP |
| 14 | TAPPING SCREW | 44 | SWITCH |
| 15 | GEAR BOX COVER | 45 | CAPACITOR |
| 16 | BEARING 6000-2RS | 46 | CORD ANCHORAGE |
| 17 | BEVEL GEAR | 47 | CORD GUARD |
| 18 | WORM | 48 | POWER CORD&PLUG |
| 19 | OUTPUT SHAFT | 49 | LEFT HOUSING |
| 20 | WOODRUFF KEY | 50 | CARBON BRUSH |
| 21 | BEARING 606-2RS | 51 | BRUSH BRACKET |
| 22 | TAPPING SCREW | 52 | TAPPING SCREW |
| 23 | OIL PUMP | 53 | REAR COVER |
| 24 | SPRING Ø6MM | 54 | AUXILIARY HANDLE |
| 25 | OIL TUBE | 55 | LABEL |
| 26 | ADJUSTMENT POLE | 56 | LABEL |
| 27 | WASHER | 57 | BRAKE BOARD |
| 28 | ADJUSTMENT PIN | 58 | OIL |
| 29 | RIGHT HANDLE | 59 | SPANNER |
| 30 | OIL OUTLET | 60 | RUBBER SEAL |

ST20120809-01