



CC9922

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
2	SCREW	26-3	OIL CONNECTOR ASSEMBLY	49-4	FIXED WASHER
3	WARNING LABEL	27	INPUT OIL TUBE	49-5	WING WASHER
4	CONNECTION WIRE	28	CONTROL SWITCH	49-6	LOCK WASHER
5	INDUCTOR	29	CLASPER	49-7	CIRCLIP
6	CONNECTION WIRE	30	OUTPUT SHAFT ASS.	50	CIRCLIP
7	CAPACITOR	30-1	BEARING 608Z	51	SEALING COVER
8	TRIGGER	30-2	ADJUSTING SHEET	52	SCREW
9	GRIP ASS.	30-3	BIG WORM GEAR	53	CHAIN COVER
9-1	POWER CABLE	32	OUTPUT OIL TUBE	54	SAW CHAIN
9-2	CORD SLEEVE	33	MIDDLE COVER ASS.	55	GUIDE BAR
9-4	CORD ANCHORAGE	33-1	SPRING	56	GUIDE COVER ASS.
9-5	SCREW	33-2	STOP PULL HOOK ASS.	56-1	SEALING WASHER
9-6	TERMINAL BLOCK	33-3	SCREW	56-2	GUIDE BAR COVER
10	BRUSH COVER	33-4	WASHER	57	SHAFT SLEEVE
11	SWITCH	33-5	NUT	58	LOCK NUT
12	CARBON BRUSH	33-6	BRAKE STRIP	59	NUT COVER
13	NAME PLATE	33-9	INPUT CONNECTOR	60	SPANNER
14	LABEL	33-10	BEARING 6201Z	200	OUTPUT SHAFT
15	HOUSING ASS.	34	BRAKE GUARD	202	WORM GEAR
15-1	BRUSH HOLDER	35	SPRING	203	WORM GEAR SHAFT
15-3	STATOR	36	GUIDE BOLT	204	OIL PUMP SHELF
15-4	SCREW	39	SCREW	205	SEALING RING
16	WIND GUARD	40	MANDRIL	206	PLUNGE COVER
17	ROTOR ASS.	41	FRONT GRIP ASS.	207	OIL PUMP BODY
17-1	BEARING 629Z	41-1	FRONT LEFT GRIP	208	SCREW
17-2	ROTOR	41-2	FRONT RIGHT GRIP	209	SCREW
17-3	BEARING 6301Z	41-3	SCREW	210	MIDDLE COVER
18	SMALL WORM GEAR	42	CHAIN TENSIONING SCREW	211	OUTPUT OIL TUBE
19	GEAR BOX	43	CHAIN TENSIONING BOLT	301	HANDLE COVER
20	OIL POSITION LABEL	44	SCREW	888	HOUSING ASSEMBLY
21	OIL TANK COVER	45	SCREW		
22	OIL TANK CAP	46	SCREW		
23	VALVE	47	SPRING		
24	SEALING RING	48	TRANSMISSION CLUTCH		
25	SCREW	49	BRAKE RING ASS.		
26	OIL TANK ASS.	49-1	DRIVEN CLUTCH		
26-1	OIL TANK	49-2	BRAKE RING		
26-2	SPONGE	49-3	CHAIN WHEEL		

ST20101125-02