



CC9929S

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CABLE	45	TUBING
2	CABLE PROTECTOR	46	SPRING
3	CABLE ANCHORAGE	47	OIL PUMP COMPONENTS
4	SCREW ST4*12	47-1	SCREW ST3*8
5	SWITCH	47-2	PUMP BODY
6	SWITCH TRIGGER	47-3	PISTON BUSH
7	SPRING	47-4	TURBINE ROD
8	SAFETY LOCKING BUTTON	47-5	TURBINE TOOTH
9	CAPACITOR	48	SPRING
10	PUSH ROD	49	TUBING
11	SPRING	50	OUT OF THE NOZZLE
12	BRUSH CAP	51	O-RING
13	NUT M4	52	WASHER ϕ 4
14	HANDLE	53	BRAKE LEVER
15	CARBON BRUSH HOLDER	54	SPRING
17	SCREW ST5*16	55	BRAKE FIXING PLATE
18	SCREW M4*70	56	SCREW ST4*22
19	CARBON BRUSH	57	SUPPORT PLATE
20	BRUSH HOLDER	58	GEAR ASSEMBLY
21	NUT M4	58-1	NUT M8
22	MOTOR BACK BRACKET	58-2	SCREW M4*10
23	INDUCTOR	58-3	GEAR MOLD INSERT
24	SOFT START	58-4	BIG BEVEL GEAR
25	BEARING 608RS	58-5	SHAFT SLEEVE
26	ROTOR	58-6	BRAKE TORSION SPRING
27	BEARING 6000RS	58-7	OUTPUT SHAFT
28	SMALL BEVEL GEAR	58-8	BEARING 608RS
29	NUT M6	59	DUST COVER
30	STATOR	60	SCREW ST4*20
31	SCREW M4*16	61	GEAR BOX COVER
32	MOTOR FRONT BRACKET	62	SCREW ST5*30
33	WASHER ϕ 4	63	RUBBER RING
34	SPRING WASHER ϕ 4	64	BUMPER SPIKE
35	NON-STANDARD SCREW M4*65	65	SCREW ST4*10
36	SCREW M5*40	66	SCREW ST5*70
37	AUXILIARY HANDLE	67	SPRING
38	CONNECTING ROD	68	CHAIN WHEEL
39	PROTECTIVE PLATE	69	CIRCLIP ϕ 7
40	PIN ϕ 3X12	70	SHAFT SLEEVE
41	GEAR BOX	71	GUIDE BAR SCREW
42	LEAF SPRING	72	KNOCKOUT PLATE
43	SCREW ST3*8	73	CIRCLING ROUND WHEEL
44	OIL TANK ASSEMBLY	74	WASHER ϕ 11X ϕ 20X1
44-1	OIL TANK COVER	75	CIRCLIP
44-2	POTHOOK	76	CHAIN COVER
44-3	O-RING	77	CIRCLIP ϕ 19
44-4	CHECK VALVE	78	TENSIONING KNOB
44-5	OIL TANK	79	COMPRESS KNOB
44-6	PLUG	80	GUIDE BAR
44-7	SPONGE	81	CHAIN
44-8	FUEL TANK JOINT	82	SCABBARD
44-9	SEALING RING		