



ER1110E

NO.	DESCRIPTION	NO.	DESCRIPTION
1	NUT	47	BRAKE PAD
2	BIT	48	KNOB LOCK BUTTON
4	COLLET 6MM	49	ROTATE BUTTON
5	COLLET 8MM	50	SCREW
6	SPRING	51	SPRING
7	DUST BLOCK	52	SCREW KNOB
8	BEARING COVER	53	BRAKE
9	BEARING 6003RS	54	GUIDE ROD CAP
10	SCREW	55	SPRING
11	CAP	56	GUIDE ROD
12	ROTOR	57	DUST GUIDE
13	BEARING 608Z	59	GUIDING ROD
15	WIND GUIDE	60	PARALLEL GUIDE
16	SCREW	61	WASHER
17	WASHER	62	SCREW
18	STATOR	63	GUIDING ROD
19	HOUSING	64	GLIDE RUBBER
20	SWITCH BUTTON	65	SCREW
21	BRUSH	66	BASE
22	BRUSH HOLDER	67	BUSH GUIDE
23	BRUSH CAP	69	SCREW
24	SWITCH ROD	70	BALL
25	CABLE CLAMP	71	SCREW
26	SCREW	72	SCREW
27	SWITCH	73	SCREW
28	WASHER	74	NUT
29	WASHER	75	LOCK
30	CABLE SLEEVE	76	SCREW
31	REAR COVER	77	CLAMP
32	WASHER	78	SCREW
33	SCREW	79	BASE PLATE
34	CABLE&PLUG	80	WING SCREW
35	NUT	81	GUIDE ROD
36	WASHER	82	WRENCH
37	HEX. BOLT	84	SCREW
38	RING	85	SWITCH HOLDER
39	HANDLE	86	SCREW
40	SCREW	87	SPEED REGULATOR
41	LOCK LEVER	88	HEX WRENCH
42	SPRING	89	SCREW
43	SCREW	90	HANDLE CAP
44	DEPTH GAUGE	91	O-RING
45	BRACKET	92	SPRING
46	SPRING		