



## ER1112

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CARBON BRUSH	39	SPRING
2	BRUSH HOLDER	40	SELF-LOCKING BLOCK
3	BACK COVER	41	FORE COVER
4	TAPPING SCREW	42	SCREW M4X18
5	SIDE COVER	43	COLLET SPRING
6	TAPPING SCREW	44	COLLET
7	CIRCUIT BOARD	45	COLLET NUT
8	HOUSING	46	LOCKING SCREW SPRING
9	STATOR	47	LOCKING SCREW
10	STATOR SCREW	48	STANDING POLE A
11	WIND GUARD	49	LOCATING SCREW
12	BEARING 608Z	50	STANDING POLE B
13	ROTOR	51	ACTIVE SPRING
14	PLAIN HEAD SCREW	52	SLIDING PIN
15	BEARING COVER	53	SCREW
16	BEARING 6003Z	54	BACKER DOLLOP
17	MIDDLE FRAME	55	STEEL BALL
18	SPRING	56	SPRING
19	LOCKING SCREW	57	BASE
20	TWIST SPRING	58	BASE BOARD
21	LOCKING COPPER SCREW	59	PLAIN HEAD SCREW
22	LOCKING KNOB	60	GUIDE BUSH
23	SCREW	61	PLAIN HEAD SCREW
24	RIGHT HANDLE A	62	DUST EXHAUSTOR
25	CABLE SLEEVE	63	SPANNER
26	CABLE	64	SLIDING LINEAR RACK
27	CABLE CLAMP	65	GUILDING POLE
28	TAPPING SCREW	66	DYNAMIC FINE TUNING
29	TAPPING SCREW	67	STATIC FINE TUNING
30	RIGHT HANDLE B	68	SPRING
31	SWITCH	69	MEASURING SCALE
32	CAPACITOR	70	POINTER
33	SCREW	71	SCREW
34	SPRING WASHER	72	PLAIN WASHER
35	PLAIN WASHER	73	IRON BOARD
36	LEFT HANDLE A	74	SOCKET HEAD SCREW
37	LEFT HANDLE B	75	PLASTIC BOARD
38	ROTOR LOCATING NUT	76	PLAIN HEAD SCREW

RU5101101