



ER1112

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CARBON BRUSH	41	FORE COVER
2	BRUSH HOLDER	42	SCREW M4X18
3	BACK COVER	43	COLLET SPRING
4	TAPPING SCREW	44	COLLET
5	SIDE COVER	45	COLLET NUT
6	TAPPING SCREW	46	LOCKING SCREW SPRING
7	CIRCUIT BOARD	47	LOCKING SCREW
8	HOUSING	48	STANDING POLE A
9	STATOR	49	LOCATING SCREW
10	STATOR SCREW	50	STANDING POLE B
11	WIND GUARD	51	ACTIVE SPRING
12	BEARING 608Z	52	SLIDING PIN
13	ROTOR	53	SCREW
14	PLAIN HEAD SCREW	54	BACKER DOLLOP
15	BEARING COVER	55	STEEL BALL
16	BEARING 6003Z	56	SPRING
17	MIDDLE FRAME	57	BASE
18	SPRING	58	BASE BOARD
19	LOCKING SCREW	59	PLAIN HEAD SCREW
20	TWIST SPRING	60	GUIDE BUSH
21	LOCKING COPPER SCREW	61	PLAIN HEAD SCREW
22	LOCKING KNOB	62	DUST EXHAUSTOR
23	SCREW	63	SPANNER
24	RIGHT HANDLE	64	SLIDING LINEAR RACK
25	CABLE SLEEVE	65	GUILDING POLE
26	CABLE	66	DYNAMIC FINE TUNING
27	CABLE CLAMP	67	STATIC FINE TUNING
28	TAPPING SCREW	68	SPRING
29	TAPPING SCREW	69	MEASURING SCALE
31	SWITCH	70	POINTER
32	CAPACITOR	71	SCREW
33	SCREW	72	PLAIN WASHER
34	SPRING WASHER	73	IRON BOARD
35	PLAIN WASHER	74	SOCKET HEAD SCREW
36	LEFT HANDLE	75	PLASTIC BOARD
38	ROTOR LOCATING NUT	76	PLAIN HEAD SCREW
39	SPRING		
40	SELF-LOCKING BLOCK		

ST20101214-01