


ER111H

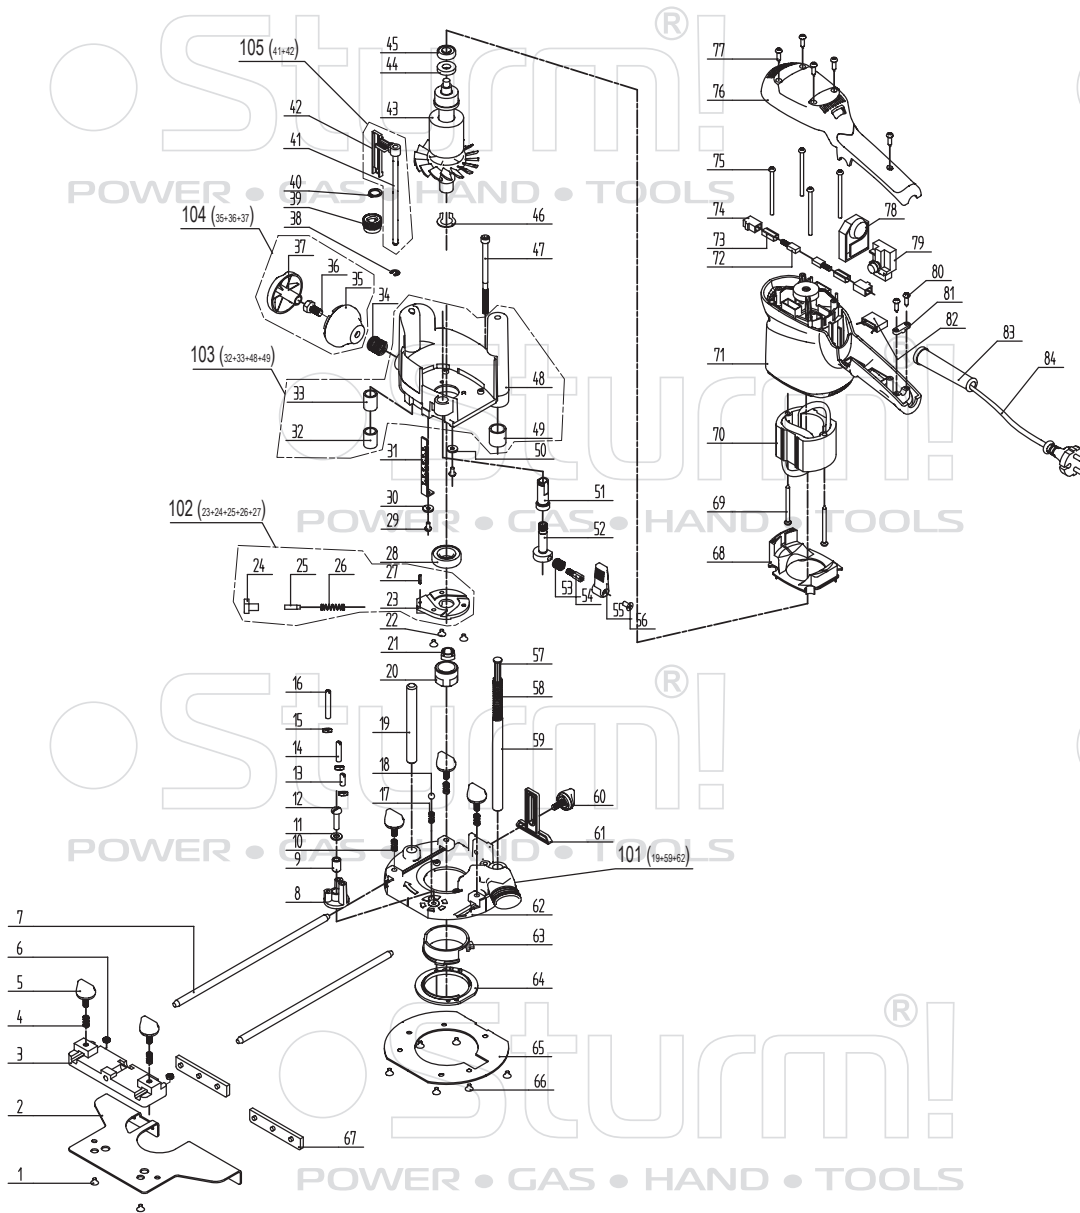

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW	54	BOLT
2	PARALLEL GUIDE	55	CLAMPING LEVER
3	PARALLEL GUIDE BASE	56	SCREW
4	SPRING	57	SPRING GUIDE BAR
5	ROTATING KNOB	58	SPRING
6	NUT	59	HOLLOW GUIDE BAR
7	GUIDE BAR	60	ROTATING KNOB
8	PIVOTED TURRET STOP	61	LEVELLING POLE
9	STEEL CHUCK	62	ROUTER TABLE
10	SPRING	63	CHIP GUARD
11	FLAT WASHER	64	CHIP GUARD LOCATION RING
12	SCREW	65	BASE PLATE
13	RETENTION SCREW	66	SCREW
14	RETENTION SCREW	67	GUARD PLATE
15	NUT	68	WIND GUARD
16	RETENTION SCREW	69	SCREW
17	SPRING	70	STATOR
18	STEEL BALL	71	HOUSING
19	SOLID GUIDE BAR	72	CARBON BRUSH
20	LOCKING NUT	73	BRUSH SLEEVE
21	STEEL CHUCK	74	BRUSH HOLDER
22	SCREW	75	SCREW
23	FORE COVER	76	HOUSING COVER
24	PUSH BUTTON	77	SCREW
25	PUSH ROD	78	SPEED CONTROLLER
26	SPRING	79	SWITCH
27	PIN	80	SCREW
28	BEARING 6003	81	PRESS BOARD
29	SCREW	82	CAPACITOR
30	WASHER	83	CABLE SLEEVE
31	STAFF GAUGE	84	CORD & PLUG
32	SMALL SLIDE CHUCK	101	ROUTER TABLE ASSEMBLY (19+59+62)
33	LOCKING CHUCK	102	FORE COVER ASSEMBLY (23+24+25+26+27)
34	SPRING	103	ALUMINUM HOUSING ASSEMBLY (32+33+48+49)
35	ROTARY KNOB BASE	104	ASSISTANT HANDLE ASSEMBLY (35+36+37)
36	HEX BOLT	105	STOP BAR ASSEMBLY (41+42)
37	ROTARY KNOB COVER		
38	CLIP		
39	TRIMMER KNOB		
40	CLIP		
41	QUICK STOP BAR		
42	SHOW RACK		
43	ROTOR		
44	SPACER RING		
45	BEARING 608		
46	CLIP		
47	SPACING BOLT		
48	HOUSING BASE		
49	BIG SLIDE CHUCK		
50	FLAT WASHER		
51	OUTSIDE SLEEVE		
52	GUIDE BAR SLEEVE		
53	SPRING		