



ER1120P

NO.	DESCRIPTION	NO.	DESCRIPTION
01	REAR HOUSING	38	TIGHTEN SCREW
02	TAPPING SCREW	39	LOCKED WRENCH
03	STABLE POWER SPEED ADJUSTING ADAPTOR	40	HEX SCREW;
04	"CROSS" TAPPING SCREW ST4.2*16	41	SELF-LOCK SPRING
05	BEARING BASE	42	SELF-LOCK PIN
06	BRUSH HOLDER	43	INNER RETAINING RING
07	CARBON BRUSH	44	SELF-LOCK PIN CAP
08	BRUSH HOLDER CAP	45	COLLET
09	ADJUSTING KNOB	46	COLLET NUT
10	CORD	47	TAPPING SCREW
11	CORD GUARD	48	THREAD POLE
12	NYLON NUT	49	LONG COMPRESSURE SPRING
13	SWITCH COVER	50	LEFT POLE
14	TAPPING SCREW	51	WINGED BOLT
15	SWITCH	52	ADJUSTING SCREW
16	STRAIN RELIEF	53	T SHAPED PIN
17	TAPPING SCREW	54	FLAT HEAD SCREW
18	MOTOR HOUSING	55	HEX SCREW
19	STATOR	56	LIMITED BASE SPRING
20	BAFFLE PLATE	57	LIMITED BASE
21	TAPPING SCREW	58	RIVET
22	BALL BEARING 6000-2S	59	WINGED BOLT
23	AMATURE	60	WINGED SCREW
24	P.H. SCREW	61	WINGED BOLT SPRING
25	BEARING RETAINING	62	OPEN SPRING PIN
26	BALL BEARING 6004-2RS	63	BASE
27	QUICK FEED SCREW	64	PLASTIC DISC
28	SMALL COMPRESSION SPRING	65	P.H. SCREW
29	QUICK FEED COPPER NUT	66	"CROSS" GROOVE HEAD SCREW
30	THREE ANGLE COVER	67	POSITIONNG POLE
31	P.H. SCREW	68	BRACKET
32	LEFT UP HANDLE	69	OPENING SPRING PIN
33	LEFT DOWN HANDLE	70	TAPPING SCREW
34	STEP STEEL HARNESS	71	P.H. SCREW
35	HEAD CASE	72	RIGHT UP HANDLE
36	COLUMN STEEL HARNESS	73	RIGHT DOWN HANDLE
37	HOOK SPRING	74	TAPPING SCREW