



## GT3516BH

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	NUT M10	40	HANDLE BEND	77	CABLE
2	DUST COVER	41	HANDLE ASSEMBLY	78	CABLE SHEATH
3	UPPER FLANGE	42	BELLOWS	79	NUT M8
4	BLADE	43	NYLON RIBBON	80	FAN
5	DOWN FLANGE	44	FLAT WIRE	81	BEARING CAP
6	CIRCLIP Ø32	45	SCREW	82	LEFT HOUSING
7	BEARING 6002	46	SCREW	83	CAPACITANCE
8	SPINDLE	47	RIGHT COVER CAP	84	SOFT START
9	BIG GEAR	48	SCREW	85	WIRE PRESS PLATE
10	BEARING 6000	49	HOUSING ASSEMBLY	86	SCREW ST3*6
11	SCREW M5X10	50	LABEL	87	WASHER
12	CIRCLIP Ø5	51	CONNECTED PIPE	88	LEFT COVER CAP
13	DUST COVER	52	CIRCLIP	89	LABEL
14	GEAR BOX	53	OUTPUT SHAFT	90	LEFT HANDLE
15	CIRCLIP Ø5	54	KEY-FLYWHELL	91	NUT M6*60
16	SCREW M5X12	55	SCREW ST5*20	92	SCREW M5*8
17	SMALL GEAR	56	GEAR BOX COVER	93	BELT RING
18	BEARING 6000	57	BEARING 6000	94	RING
19	CIRCLIP Ø26	58	WASHER Ø8	95	NUT M5
20	CIRCLIP Ø10	59	BIG GEAR 29	96	"BEHINDSTRAIGHT SHAFT"
21	SHAFT CONNECTOR	60	SMALL GEAR 16	97	"BEHINDALUMINUM PIPE"
22	SCREW M5*25	61	SCREW ST5*75	98	NUT M5
23	WASHER Ø5	62	WASHER Ø4	99	FIXED PLATE
24	CIRCLIP Ø5	63	SCREW M4*6	100	SCREW M5*35
25	LOWER COVER	64	WASHER Ø26	101	SCREW M5*20
26	HANDLE SEAT	65	WASHER Ø10	102	SCREW M5*25
27	TOP COVER	66	BEARING 606	103	PROTECT COVER
28	WASHER Ø5	67	RUBBER	104	BLADE
29	CIRCLIP Ø5	68	BEARING SEAT	105	SCREW
30	SCREW M5*25	69	STATOR	106	STRAPS
31	RUBBER RING	70	BEARING 608	107	SPANNER
32	HANDLE BEND	71	ARMATURE	108	ROTARY GRASS HEAD
33	SCREW	72	BEARING 608	109	WRENCH
34	WIRE PRESS PLATE	73	BEARING SEAT	201	GEAR BOX ASSEMBLY
36	SWITCH	74	CARBON BRUSH	202	ROD WITH SHAFT ASSEMBLY
37	SWITCH HANDLE COVER	75	SCREW ST3*8		
38	SCREW	76	BRUSH HOLDER		

ST20121212