



## GT3535L

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SOFT COVER	9	PROTECT GUARD ASSEMBLY
2	CAPACITOR		GUARD
3	SPING FLANK ASSEMBLY		BLADE
	UP RECEPTACLE		TAPPING SCREW
	DOWN RECEPTACLE		TAPPING SCREW
	INSERT FLAKE		PLAIN WASHER
	SCREW		BLADE SLEEVE
	BROWN WIRE	10	FAN
	BLUE WIRE	11	SPOOL SPING
4	LEFT HANDLE	12	SPOOL RACK ASSEMBLY
5	FLEXING TUBE		SPOOL WHEEL
6	CONNECTING WIRE		NYLON WIRE
7	LEFT HOUSING	13	SPOOL COVER
8	MOTOR ASSEMBLY	14	SPIN COVER
	STATOR	15	CORD CLAMP ASSEMBLY
	ROTOR		CORD CLAMP
	FRONT COVER		TAPPING SCREW
	BACK COVER	16	SWITCH
	BEARING 607Z	17	CORD SLEEVE
	BEARING 627Z	18	SWITCH TRIGGER
	CARBON BRUSH	19	POWER CORD AND PLUG
	BRUSH HOLDER	20	RIGHT HANDLE
	INSERT FLAKE	21	TAPPING SCREW
	PLAIN WASHER	22	RIGHT HOUSING
	SCREW M4X70	23	TAPPING SCREW
	SCREW M4X60		
	SPRING WASHER		
	INDUCTOR		

RU5110801