



HW9920

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|---------------------------|-----|--------------------------|
| 1 | CONTROL PANEL | 22 | MESH |
| 2 | PCB | 23 | AIR STRIP |
| 3 | FRONT COVER | 24 | LINK BAR |
| 4 | SCREW | 25 | SWITCH |
| 5 | MOTOR CLASP RING | 26 | WIND WHEEL |
| 6 | MOTOR | 27 | CLASP RING |
| 7 | SYNCHRONOUS MOTOR | 28 | DRIVE LINK |
| 8 | SYNCHRONOUS MOTOR BRACKET | 29 | THERMAL SHIELD |
| 9 | CAPACITY | 30 | SYNCHRONOUS MOTOR SLEEVE |
| 11 | HARD WIRE CLAMP | 31 | POWER PANEL |
| 12 | BACK COVER | 32 | PUSH ROD |
| 13 | POWER CORD | 33 | SPRING |
| 14 | WIRE CLAMP | 34 | BUTTON CAP |
| 15 | SCREW | 35 | RECEIVER WINDOW |
| 16 | SCREW | 36 | REMOTE CONTROL |
| 17 | PTC HEATING ELEMENT | 37 | THERMAL LINK FIXED RING |
| 18 | PTC BRACKET | 38 | THERMAL LINK |
| 19 | OIL-IMPREGNATED BEARING | 39 | SCREW |
| 20 | LEFT CONNECTING BAR | 40 | THERMAL LINK BLOCK |
| 21 | AIR OUTLET | | |

ST20100708

