



ID2155P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	KEYLESS CHUCK	29	CLAMP
2	ADJUSTMENT PLATE	30	MOTOR FLANGE
3	INTERNAL SCREW SLEEVE	31	DUST PROOF WASHER
4	BIG SPRING	32	BALL BEARING 6000Z
5	BIG WASHER	33	STATOR
6	OUTPUT SHAFT	34	ROTOR
7	WASHER	35	INSULATING BARRIER
8	BALL BEARING 6800Z	36	BALL BEARING 607Z
9	STEEL BALL $\Phi 5$	37	BRUSH CAP
10	GEAR CASE	38	CARBON BRUSH
11	BALL BEARING 6800Z	39	BRUSH HOLDER
12	CIRCLIP $\Phi 10$	40	CARBON BRUSH HOLDER
13	FIXED RING	41	SPEED PUSH BUTTON
14	ROUND PIN	42	SPEED SPRING
15	DRIVING DISC	43	ROUND PIN
16	LEVEL 3 PLANET CARRIER	44	ADJUSTMENT PLATE SHRAPNEL
17	INNER GEAR RING	45	TENSION SPRING
18	LEVEL 3 PLANETARY GEAR	46	INDUCTANCE
19	WASHER	47	DIRECTION SETTING BUTTON
20	LEVEL 2 PLANET CARRIER	48	SWITCH
21	HOOK	49	CAPACITOR
22	SPEED CHANGING BOX	50	CORD ANCHORAGE
23	TAPPING SCREW ST3*12	51	TAPPING SCREW ST4*14
24	DYNAMIC GEAR RING	52	CABLE
25	LEVEL 2 PLANETARY GEAR	53	HOUSING ASSEMBLY
26	LEVEL 1 PLANET CARRIER	54	TAPPING SCREW ST3*14
27	LEVEL 1 PLANETARY GEAR	55	CHUCK SCREW
28	FIXED GEAR RING	100	GEAR BOX ASSEMBLY

UK-ST20180612