



JS4075P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	UPPER SLIDE BUSH	27	BLADE RACK
2	RECIPROCATING POLE ASSEMBLY	28	DUST-PROOF BLOCK 2
3	ROLLER BUSH	29	LEFT HOUSING
4	CIRCLIP Ø6	30	DUST-PROOF BLOCK 1
5	WASHER	31	DUST-PROOF CLAMP BOARD
6	GEAR ASSEMBLY	32	ADJUSTMENT SPEED BOARD
7	BALANCE BLOCK	33	NEEDLE
8	SUPPORT PLATE	34	SWITCH
9	NEEDLE BEARING	35	CAPACITOR
10	CENTER BRACKET	36	CORD ANCHORAGE
11	STATOR	37	TAPPING SCREW
12	TAPPING SCREW	38	CORD SLEEVE
13	NEEDLE	39	CORD
14	RIGHT HOUSING	40	KNOB OF GUIDE RULER
15	TAPPING SCREW	41	GUIDE RULER
16	BEARING 629	42	BASE PLATE
17	ARMATURE	43	CIRCLIP Ø6
18	RIGHT DECORATE RING	44	BASE PLATE POSITION PIN
19	BRUSH HOLDER ASSEMBLY	45	SQUARE NUT
19A	BRUSH HOLDER	46	BASE PLATE POSITION WASHER
19B	CARBON BRUSH	47	WASHER
19C	BRUSH BUSHING	48	INNER HEXAGON SCREW
20	BEARING 608	49	GUIDE ROLLER
21	POSITION PLATE OF RECIPROCATING POLE	50	PENDULUM RACK AXIS
22	TRANSPARENC GURAD	51	PENDULUM KNOB
23	RESETTING SPRING	52	RESETTING SPRING FOR PENDULUM RACK
24	RESETTING PIN	53	AXIS OF PENDULUM ADJUSTMENT
25	INNER HEXAGON SCREW	54	LEFT DECORATE RING
26	UNDERNEATH SLIDE BUSH		

ST20101029-2