



JS4076S JS4076P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	TAPPING SCREW	28	BRUSH HOLDER
3	ADJUSTING SCREW	29	BALANCE BLOCK
4	CONNECTING PLATE	30	CONNECTING PLATE
5	BASE PLATE	31	NEEDLE ROLLER BEARING
6	CIRCLIP	32	LIFTING KNIFE PLATE
7	METAL PENDULUM SWITCH	33	BEARING HOLDER
8	ROLLER SPRING	34	BEARING 608Z
9	WASHER	35	ROTOR
10	ROLLING METAL GUIDE	36	BRUSH HOLDER
11	SAW HOLDER PIN	37	CARBON BRUSH
12	SUPPORT ROLLER	38	BRUSH BUSHING
13	ROLLER PIN	39	BEARING 607Z
14	BIG GEARING	40	STATOR
15	ROLLER	41	CAPACITOR
16	CIRCLIP	42	DUST CONNECTION
17	SPRING	43	CORD SLEEVE
18	HOLDER FOR SAW ARM	44	CORD & PLUG
19	SOCKET HEAD SCREW	45	"O" TYPE RING
20	SOCKET HEAD SCREW	46	TAPPING SCREW
21	SAW HOLDER	47	STRAIN RELIEF
22	SAW ARM	48	SWITCH
23	HOLDER FOR SAW ARM	49	PCB
24	PROTECTING GUARD	50	RUBBER PIN
25	PENDULUM SWITCH KNOB	888	HOUSING ASSEMBLE
27	PIN		

ST20110216-01

