



JS4086Q

NO.	DESCRIPTION	NO.	DESCRIPTION
1	RIGHT ENCLOSURE	28	STATOR
2	TAPPING SCREW 3.9X38	29	CORD SLEEVE
3	TAPPING SCREW 3.9X19	30	AC-ORD&PLUG
4	FOOT PLATE	31	TAPPING SCREW 3.9X14
5	FIXING PLATE	32	CORD CLAMP
6	ADJUSTING SCREW M4X14	33	CONNECTING PLATE
7	SUPPORT PIN	34	CLOSING RING
8	ECCENTRIC WHEEL	35	WASHER
9	ROLLER SUPPORT	36	FINGER GUARD
10	TORSION-SPRING	37	BACK BEARING
11	BLADE	38	SPRING
12	QUICK PLUNGER ASSEMBLY	39	LASER HOLDER
13	FRONT BEARING	40	TAPPING SCRW 2.9X6
14	BUSH	41	TAPPING SCRW 2.9X9
15	GEAR	42	LASER HEAD
16	CLOSING RING	43	PCB FOR LASER
17	WASHER	44	LASER HEAD BUTTON
18	NEEDLE ROLLER BEARING	45	LASER HEAD SWITCH
19	COUNTERBALANCE	46	PENDULUM KNOB
20	PENDULUM BAR	47	METAL BALL
21	BEARING HOLDER	48	SPRING
22	BEARING 629-2RS	49	PCB
23	BRUSH HOLDER	50	SWITCH
24	BRUSH HOLDER SUPPORT	51	TRANSFORMER
25	CARBON BRUSH	52	TERIMINAL BLOCK
26	ROTOR	53	LEFT ENCLOSURE
27	BEARING 607-2RS	54	

RU080828-1