



JS4090QM

NO.	DESCRIPTION	NO.	DESCRIPTION
2	TAPPING SCREW 3.9X38	28	STATOR
3	TAPPING SCREW 3.9X19	29	CORD SLEEVE
4	FOOT PLATE	30	AC-ORD&PLUG
5	FIXING PLATE	31	TAPPING SCREW 3.9X14
6	ADJUSTING SCREW M4X14	32	CORD CLAMP
7	SUPPORT PIN	33	CONNECTING PLATE
8	ECCENTRIC WHEEL	34	CLOSING RING
9	ROLLER SUPPORT	35	WASHER
10	TORSION-SPRING	36	FINGER GUARD
11	BLADE	37	BACK BEARING
12	QUICK PLUNGER ASSEMBLY	38	SPRING
13	FRONT BEARING	39	LASER HOLDER
14	BUSH	40	TAPPING SCRW 2.9X6
15	GEAR	41	TAPPING SCRW 2.9X9
16	CLOSING RING	42	LASER HEAD
17	WASHER	43	PCB FOR LASER
18	NEEDLE ROLLER BEARING	44	LASER HEAD BUTTON
19	COUNTERBALANCE	45	LASER HEAD SWITCH
20	PENDULUM BAR	46	PENDULUM KNOB
21	BEARING HOLDER	47	METAL BALL
22	BEARING 629-2RS	48	SPRING
23	BRUSH HOLDER	49	PCB
24	BRUSH HOLDER SUPPORT	50	SWITCH
25	CARBON BRUSH	51	TRANSFORMER
26	ROTOR	52	TERIMINAL BLOCK
27	BEARING 607-2RS	888	HOUSING ASSEMBLE

UK-ST20170808