



JS4170P

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SWITCH	44	REAR GEAR HOUSING
3	TAPPING SCREW 4X20	45	TAPPING SCREW
4	POWER CORD & PLUG	46	PLATE
5	CORD SLEEVE	48	SCREW
6	CORD CLAMP	49	SPRING
7	TAPPING SCREW 4X18	50	"E" RING
8	CAPACITOR	51	PIN
9	PIN	52	SCREW
10	SWITCH TRIGGER	53	ROLLING METAL GUIDE
11	FIXTURE	54	LONG SCREW
12	SPRING	56	TOOL HOLDER
13	SWITCH LOCK KNOB	57	SCREW
14	VARIABLE SPEED SWITCH	58	GUIDE PLATE
15	TAPPING SCREW 4X20	59	PENDULUM STROKE KNOB
16	TAPPING SCREW 4X15	60	SPRING
17	FORNT GEAR HOUSING	61	STEEL BALL
18	PLATE	62	"E" RING
19	TOOL REST	64	UPPER BOTTOM PLATE
20	SCREW M4X10	65	CLIP PLATE
21	STOPPER	66	SCREW
22	BALL BEARING 607	67	LOWER BOTTOM PLATE
23	BEARING HOLDER	68	FAN GUIDE
24	WASHER	69	STATOR
25	BALANCE PLATE	70	SCREW
26	BALANCE PLATE	71	MOTOR HOUSING
27	ROCKING PLATE	72	CARBON BRUSH
28	WASHER	73	BRUSH HOLDER
29	NEEDLE BEARING HK0810	74	LABEL
30	BEVEL GEAR	75	REAR COVER
31	NEEDLE BEARING HK0810	76	TAPPING SCREW
32	WASHER	77	NAME PLATE
33	GEAR SHAFT	78	COVER
34	BALL BEARING BUSH	79	TAPPING SCREW
35	BALL BEARING 607	80	SCREW
36	ROTOR	81	BLADE CLAMP
37	FAN	101	SUPPORT ROLLER
38	BALL BEARING 608	102	ROLLER PIN
39	SCREW	888	HANDLE ASSEMBLE
40	WASHER		
41	WASHER		

ST20101214-01