



## JS4175Q

No.	Description	No.	Description
1	Protective cap	31	Ball bearing 609.2RS
2	Cutter arbor complete	32	Armature
3	Round support	33	Carbon brush
4	Cutter arbor support spring	34	Brush holder
5	Rectangle support	35	Tapping screw ST3X10
6	Oil-retaining bearing 5X10X8	36	Wind spring
7	Pin 5X17	37	Ball bearing 608.2RS
8	Circlip for shaft $\phi 7$	38	Stator
9	Washer 7.2X13X0.5	39	Baseplate holder
10	Saw blade	40	Baseplate clamp
11	Wheel support	41	Baseplate
12	Pin 4X20	42	Hex.socket head screw M4X14
13	Wheel shaft	43	Cord
14	Snap ring $\phi 4$	44	Cord sleeve
15	Saw blade support Wheel	45	Inductor
16	Gear	46	Housing
17	Needle bearing K7X10X8	47	Brand label
18	Balance plate slider guide	48	Wheel support adjusting knob
19	Safety wire	49	Wheel support adjusting shaft
20	Balance plate	50	Adjusting knob spring
21	Push plate	51	Steel ball 4
22	Washer 7.2X18X0.5	52	Speed regulation
23	Washer 5.2X10X0.5	53	Switch
25	Bearing case	54	Capacitor
26	Tapping screw ST4X35	55	Air door
27	Tapping screw ST4X16	56	Cord clamp
28	Tapping screw ST4X22	57	Tapping screw ST4X14
29	Rating label	58	Brush holder

UK-ST20180601