



MC8850[®]

NO.	DESCRIPTION	NO.	DESCRIPTION
1	LEFT COVER	26	HANDLE
2	RUBBER FOOT	27	PRESSURE PIECE
3	CONNECTION ROD	28	CYLINDER COVER
4	BEARING 607	29	AIR PRESSURE METER
5	ECCENTRIC WHEEL	30	BREATHER PIPE
6	BRACKET	31	CABLE
7	BEARING 608	32	CIGARETTE PLUG
8	MOTOR HOUSING	33	HANDLE RUBBER PAD (LEFT)
9	STATOR	34	HANDLE RUBBER PAD (RIGHT)
10	ADJUST PIECE	35	QUICK CONNECTOR
11	ROTOR	101	CONNECTION ROD ASSEMBLY
12	BRUSH HOLDER	102	MOTOR HOUSING AND STATOR
13	CARBON BRUSH	B1	SCREW
15	BEARING HOLDER	B2	SCREW
16	ON/OFF SWITCH	B3	BOLT
17	RIGHT COVER	B4	CIRCLIP
18	CABLE SLEEVE	B6	BRUSH SPRING
19	PISTON RING	B7	SCREW
20	PISTON PRESSURE RING	B8	RIVET
21	AIR WASHER	B10	BOLT
22	"O" RING	103	high pressure hose
23	CYLINDER BUSH		
24	RADIATOR		
25	AIR PROOF LOCK		