



MS55211

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	LEFT FIXED GUARD	42	CARBON BRUSH	83	SCALE INDICATOR
2	BOLT	43	BRUSH HOLDER	84	SCREW
3	UPPER FLANGE	44	HANDLE	85	WASHER
4	SAW BLADE	45	CAPACITOR	86	LOCKNUT
5	LOWER FLANGE	46	SWITCH	87	SPRING
6	SCREW	47	SWITCH TRIGGER	88	SCREW
7	BEARING COVER	48	HANDLE	89	PLATE
8	SELF-CLOSING GUARD	49	TAPPING SCREW	90	WASHER
9	RIVET	50	HANDLE	91	STEEL BALL
10	POLE	51	TAPPING SCREW	92	CUSHION
11	POLE	52	TAPPING SCREW	93	SCREW
12	OUTPUT SPINDLE	53	CABLE PRESSBOARD	94	SCREW
13	WOODRUFF KEY	54	CABLE SLEEVE	95	SPINDLE
14	BEARING 6002Z	55	POWER CORD & PLUG	96	NUT
15	SCREW	56	LABEL	97	SCREW
16	GEAR BOX COVER	57	MOTOR HOUSING	98	SPINDLE
17	SCREW	58	SCREW	99	BUSH
18	WASHER	59	SPRING WASHER	100	CIRCLIP
19	RIGHT FIXED GUARD	60	WASHER	101	BIG GEAR
20	TAPPING SCREW	61	BEARING COVER	102	SCREW
21	CONTROL BAR	62	BEARING 608Z	103	POLE
22	WIRE HOLDER	63	LOCKNUT	104	SPINDLE CLIP
23	DUST COLLECTING BAG	64	WASHER	105	RUBBER RING
24	SCREW	66	O-RING	106	SCREW
25	SPRING WASHER	67	locking shaft	107	LABEL
26	WASHER	68	SPRING	108	SOCKET SPANNER
27	SCREW	69	LOCKNUT	109	HEXAGON KEY
28	SPRING	70	INDICATOR	110	SCREW
29	KNOB HOLDER	71	SCREW	111	WORKPIECE CLAMP
30	LOCKING KNOB	72	BENDE ARM	112	EXTENSION BAR
31	WASHER	73	SCREW	114	SUPPORT
32	ALUMINUM PROTECTIVE COVER	74	BASE OF BENDE ARM	115	SCREW
33	BEARING 6200Z	75	FENCE	116	LOCKNUT
34	SPRING	76	SCREW		
35	LOCKING POLE	77	PROTECTIVE BOARD FOR SAW BLADE		
36	SCREW	78	BOLT		
37	WIND DEFENDER	79	SAW TABLE		
38	TAPPING SCREW	80	NUT		
39	STATOR	81	BASE		
40	ROTOR	82	SCREW		
41	BRUSH CAP				