



P1011

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW M4X10	34	ADJUST BUTTON
2	NAMEPLATE	35	PIN
3	TAPPING SCREW ST4.2X18	36	TAPPING ST4.2X18
4	BELT COVER	37	LABEL
5	BELT	38	BACK COVER
6	SMALL BELT WHEEL	39	SAFETY COVER
7	BIG BELT WHEEL	40	SPRING
8	TAPPING SCREW	41	SCREW ST4.2X10
9	SIDE COVER (LEFT)	42	HANDWHEEL COVER
10	BEARING 6000	43	TAPPING SCREW ST4.8X16
11	BEARING 6000	44	BRACKET
12	ROTOR	45	CUPRUM CAP
13	BEARING 608Z	46	SPRING
14	TAPPING SCREW ST4X18	47	HANDWHEEL
15	HANDLE COVER	48	DEPTH INDICATION WHEEL
16	TAPPING SCREW ST4.8X55	49	CIRCLIP
17	WIND FENDER	50	ENCLOSURE
18	PUSH BUTTON	51	ADJUST NUT
19	CAPACITOR	52	SPRING
20	PLUG&CORD	53	FRONT BASE
21	STATOR	54	LOCK SCREW
22	SWITCH	55	DEPTH RULER
23	KNOB	56	WRENCH
24	KNOB SPRING	57	PLASTIC PIECE
25	PUSH BUTTON SPRING	58	TAPPING SCREW ST4.2X18
26	CORD SLEEVE	59	REAR SOLE
27	TAPPING SCREW ST4.2X14	60	BLADE
28	CORD ANCHORAGE	61	SOCKET CAP HOLDING SCREW
29	INDUCTANCE	62	BLADE SETTING PLATE
30	CARBON BRUSH	63	HEX SCREW M5X10
31	BRUSH COPPER NEST	64	BLADE DRUM
32	BRUSH HOLDER	65	BLADE FIXING PLATE
33	WOOD SCRAPS FENDER	66	GUIDE
		67	LOCK SCREW

RU60615-1