



P1015

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW	43	BEARING 600RZ
2	RIGHT HANDLE COVER	44	SCREW
3	SWITCH	45	BIG BELT WHEEL
4	SCREW	46	NUT M8
5	CABLE PRESSURE BOARD	47	FRONT BOTTOM PLATE
6	INDUCTANCE	48	BIG SPRING
7	HOUSING	49	FASTENING KNOB
8	CABLE SLEEVE	50	DEPTH RULER
9	CABLE&PLUG	51	STEEL-SLEEVE
10	SHELF SPRING	52	ADJUSTING KNOB
11	HOUSING COVER	53	SCREW
12	SHELF	54	BEFORE CLAW HANDLE
13	BOTTOM PLATE	55	BEFORE CLAW HANDLE COVER
14	SCREW	56	SMALL SPRING
15	SCREW	57	STEEL BALL
16	SCREW	58	COPPER COVER
17	BELT COVER	59	CAVER DEGREE PAN
18	BELT	60	ADJUST-HAND HANDLE
19	SMALL BELT WHEEL	61	ADJUST NUT
20	SCREW	62	HAND HANDLE COVER
21	BEARING COVER	63	BEARING COVER
22	SCREW	64	NUT
23	MIDDLE COVER	65	SCREW
24	BEARING 608RZ	66	BRACE A
25	ROTOR	67	STEEL-SLEEVE
26	GUIDE WIND CIRCLE	68	ADJUST SCREW
27	SCREW	69	ADJUST KNOB
28	STATOR	70	ROTATE BRACE
29	CAPACITOR	71	CLIP SPRING
30	CARBON BRUSH HOLDER	72	SPRING
31	CARBON BRUSH	73	BAFFLE
32	SCREW	74	BRACE B
33	BUTTON	75	STEEL FIXITY
34	SPRING	76	NUT
35	DUST TUBE	77	KNIFEBOARD
36	SCREW	78	NUT
37	RIGHT SIDE COVER	79	KNIFE BLOCK
38	SCREW	80	GUIDE RULER
39	SAFE COVER	81	BLADE
40	PRESSURE SPRING	82	BLADE PRESS BOARD
41	BEARING 627RZ	83	SCREW
42	KNIFE-AXIS		