



## P1022P

NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION
1	DEPTH ADJUSTMENT KNOB COVER	40	SEAL	81	SCREW
2	SCREW	41	MIDDLE COVER	82	DUST OUTLET
3	SPRING WASHER	42	BEARING 6201Z	83	SCREW
4	WASHER	43	SCREW	84	SPRING WASHER
5	DEPTH ADJUSTMENT KNOB	44	ROTOR	85	WASHER
6	SCALE BOARD	45	BEARING 6201Z	86	SCREW
7	DEPTH ADJUSTMENT GEAR	46	WAVE WASHER	87	SPRING WASHER
8	SCREW	47	SCREW	88	WASHER
9	SPRING LAMINATION	48	WASHER	89	SCREW
10	BASE	49	SPRING WASHER	90	CABLE SLEEVE
11	FRONT BASE	50	WASHER	91	CABLE
12	DUST DIRECTION BOARD	51	SCREW	92	CABLE GUARD
13	RACK	53	SOFT SWITCH	93	HOUSING
14	ADJUSTMENT KNOB	54	CAPACITOR	94	BACK COVER
15	SPRING	55	SWITCH	95	SCREW
16	BOLT	56	SPRING	96	LABEL
17	BLADE PRESS BOARD	57	ADJUSTMENT BLOCK2	97	GUARD FIXER
18	BLADE	58	NUT	98	SHAFT
19	ADJUSTMENT SCREW	59	SMALL PULLEY	99	COIL SPRING
20	SCREW	60	SCREW	100	GUARD
21	SCREW	61	WASHER	101	WASHER
22	WASHER	62	SCREW	102	SPRING WASHER
23	ADJUSTMENT BLOCK1	64	WIND GUIDE	103	NUT
24	SPRING	65	STATOR	104	BLADE SHARPER HOLDER
25	BLADE HOLDER	66	COIL SPRING	105	BLADE SHARPER PRESS BOARD
26	BEARING 629Z	67	BOLT	106	SCREW
27	RIGHT BEARING HOLDER	68	NUT	107	GUIDE LEFT BRACKET
28	SPRING	69	CARBON BRUSHER HOLDER	108	GUIDE RIGHT BRACKET
29	RABBETING GUARD	70	CARBON BRUSHER	109	GUIDE
30	PRESS BOARD	71	SCREW	110	LOCKING KNOB
31	WASHER	72	SPRING WASHER	111	SCREW
32	LOCKING KNOB	73	WASHER	112	SWITCH LOCKING TRIGGER
33	BEARING 6201Z	74	WASHER	113	BACK SUPPORT
34	BELT COVER	75	SPRING WASHER	114	SCREW
35	BELT	76	SCREW	115	FRONT SUPPORT
36	NUT	77	SPRING WASHER	116	SPANNER
37	BIG PULLEY	78	WASHER	117	WASHER
38	SPRING WASHER	79	SCREW	888	HANDLE ASSEMBLY
39	SCREW	80	DUSTPROOF PIECE		