



P1088

NO.	DESCRIPTION	NO.	DESCRIPTION
1	SCREW	29	BEARING 607Z
2	COVER	30	ROTOR
3	BLADE GUARD	31	SWITCH
4	SPRING	32	CAPACITOR
5	SCREW	33	HANDLE COVER
6	SUPPORT BLOCK	34	BEARING 6000Z
7	ADJUST BUSHING	35	LEFT HOUSING
8	DIAL	36	KNIFE BASE
9	ADJUST ROD	37	REAR BASE
10	ADJUST KNOB	38	BEARING 627Z
11	SLIP POLE	39	KNIFE SHAFT
12	STEEL BALL	40	RIGHT SUPPORT BOARD
13	SPRING	41	SCREW
14	RIGHT HOUSING	42	FORE BASE
15	BRUSH	43	LEFT SUPPORT BOARD
16	BRUSH BUSHING	44	BLOT
17	BRUSH HOLDER	45	SCREW
18	CORD & PLUG	46	KNIFE SUPPORT
19	CORD SLEEVE	47	KNIFE SLICE
20	SCREW	48	PRESS KNIFE BLOCK
21	CORD ANCHORAGE	49	LABEL
22	INDUCTOR	50	BELT COVER
23	CENTRAL SUPPORT	51	BELT
24	PIN	52	SMALL WHEEL
25	SPRING	53	SCREW
26	STATOR	54	PRESS BOARD
27	WIND BAFFLE	55	BIG WHEEL
28	SCREW		

RU59901