



## PC8806

NO.	DESCRIPTION	NO.	DESCRIPTION
1	CARE SHELF	40	NUT
2	HEXAGONAL SCREW	41	ANTI-CLIP NUT
3	GASKET	42	MOUNTING RUBBER
4	NUT	43	NUT
5	NUT	44	SCREW
6	GASKET	45	WASHERS
7	WALKING WHEEL CLAMP	46	SCREW
8	SCREW	47	ECCENTRIC SHAFT BACK COVER
9	SCREW	48	APRONS
10	SPRING WASHER	49	BEARING
11	GASKET	50	SCREW
12	ENGINE	51	SPRING WASHER
13	NUT	52	ECCENTRIC SHAFT BRACKET
14	GASKET	53	ECCENTRIC SHAFT
15	CLUTCH INNER	54	PIN
16	CLUTCH HOUSING	55	BEARING
17	BEARING	56	APRONS
18	CIRCLIP	57	ECCENTRIC SHAFT FRONT COVER
19	PULLEY PIN	58	SCREW
20	GASKET	59	RUBBER SLEEVE
21	SCREW	60	PULLEY
22	BELT	61	GASKET
23	BELT SHELL HOLDER	62	SCREW
24	SCREW	63	REAR BRACKET
25	GASKET	64	WHEEL
26	SCREW	65	CIRCLIP
27	SCREW	66	REAR CONNECTING AXLE
28	SPRING WASHER	67	POSITIONING CLAMP
29	BELT SHELL	68	NUT
30	SCREW	69	NUT
31	RUBBER SLEEVE	70	SPRING WASHER
32	MAIN PLATE	71	GASKET
33	GASKET	72	RUBBER BLOCK
34	UNDER HANDLE	73	BOTTOM PLATE
35	SCREW	74	GASKET
36	PENTAGON HAND WHEEL	75	SPRING WASHER
37	UPPER HANDLE	76	NUT
38	THROTTLE LEVER	77	VIBRATOR ASS.
39	THROTTLE CABLE	78	WHEEL ASS.

ST20110818