


PG8735EN

NO.	DESCRIPTION	NO.	DESCRIPTION
1	FUEL TANK COVER	40	BACK COVER
2	FUEL TANK SEAL	41	HEX. FLANGE BOLT
3	FILTER SCREEN	42	HEX. FLANGE BOLT
4	FUEL GAUGE (INDICATOR)	43	COLLAPSIBLE BEAM
5	HEX. FLANGE BOLT	44	FLANGE BOLT
6	FLAT WASHER	45	ELECTRIC STARTING SWITCH
7	BUSH	46	POWER INDICATOR
8	FUEL TANK CUSHION	47	LOW OIL ALERT LIGHT
9	FUEL TANK	49N	VOLTMETER
10	FUEL TANK SWITCH FILTER SCREEN	50	BREAKER
11	FUEL TANK SWITCH SEAL	52	DC PROTECTOR
12	NUT	53N	TERMINAL
13	FUEL TANK SWITCH ASSEMBLY	54	EURO STYLE SOCKET
14	FUEL PIPE CLAMP	55	NUT
15	FUEL PIPE	56	SPRING WASHER
16N	FLAME	57	FLAT WAHSER
17	ENGINE	58	HEX. FLANGE BOLT
18	AIR FILTER BRACKET	59N	PANEL
19	HEX. FLANGE BOLT	60	BOLT
20	MUFFLER SEAL	62	PANEL REAR COVER
21	MUFFLER ASSEMBLY	63	CORD SHEATH
22	SPRING WASHER	64	NUT
23	HEX. FLANGE BOLT	65	SMALL CUSHION PAD
24	HEX. FLANGE BOLT	66	FLAT WAHSER
25	MUFFLER GUARD	67	SPRING WASHER
26	HEX. FLANGE BOLT	68	BIG CUSHION PAD
27	MUFFLER SUPPORT BRACKET	69	FLAME STAND
28A	ROTOR	70	FLAT WAHSER
29A	STATOR WINDING	71	NUT
30	MOTOR REAR COVER	73	ELECTRIC STARTING SWITCH KEY
31	RECTIFIER	74	HOOK BOLT
32	HEX. FLANGE BOLT	75	BATTERY PRESS PLATE
33	CARBON BRUSH ASSEMBLY	76	CONNECTION WIRE OF BATTERY
34	CONNECTION BLOCK	77	BATTERY
35	HEX. FLANGE BOLT	78	BATTERY BOX
36	AVR	79	NUT
37	HEX. FLANGE BOLT	80N	GUARD BOARD
38	FLAT WAHSER	81N	GUARD BOARD
39	HEX. FLANGE BOLT		

PG8735EN-EX-UKW220629PG

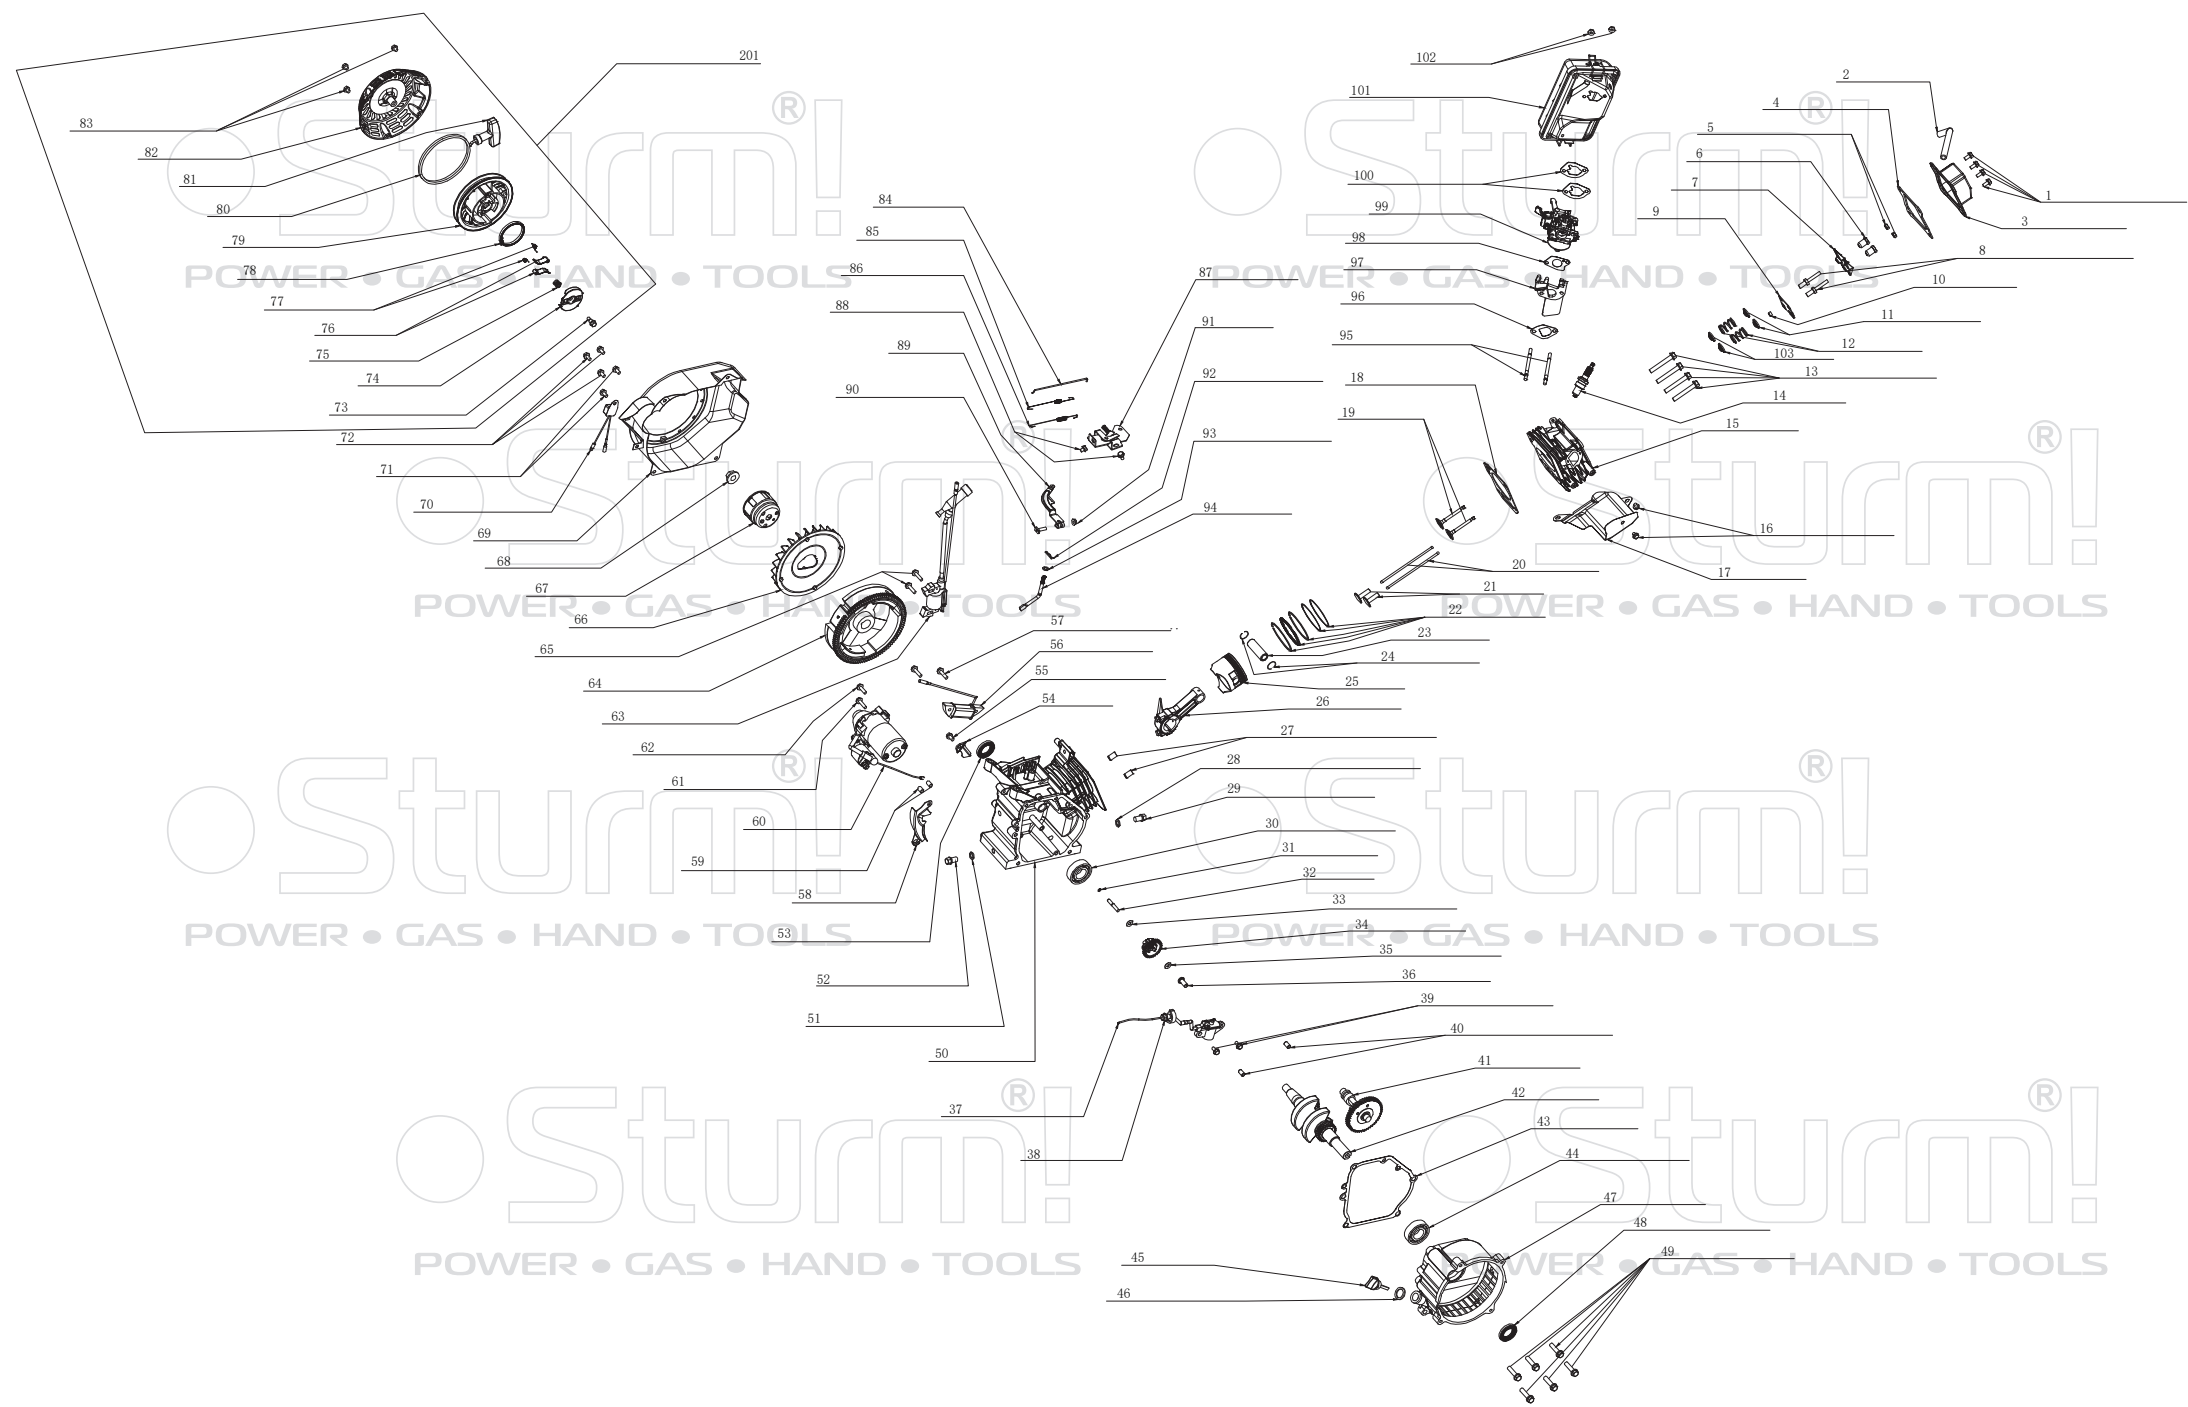

ENGINE FOR PG8735EN

NO.	DESCRIPTION	NO.	DESCRIPTION
1	HEX. FLANGE BOLT	53	OIL SEAL
2	RIGHT-ANGLE WASTE PIPE	54	PRESSURE BOARD
3	CYLINDER HEAD COMP	55	HEX. FLANGE BOLT
4	CYLINDER HEAD SEAL	56	CHARGE COIL ASSY
5	VALVE CLEARANCE ADJUSTING NUT	57	HEX. FLANGE BOLT
6	VALVE ARM NUT	58	FLY WHEEL GUARD
7	VALVE ARM	59	MOTOR ASSY POSITION PIN
8	BOLT	60	MOTOR ASSY
9	LEVER BRACKET	61	HEX. FLANGE BOLT
10	VALVE HEAD CAP	62	HEX. FLANGE BOLT
11	VALVE SPRING BASE	63	IGNITION COIL ASSY
12	VALVE SPRING	64	FLY WHEEL WITH GEAR
13	BOLT	65	HEX. FLANGE BOLT
14	SPARK PLUG	66	FAN
15	CYLINDER HEAD	67	START COVER
16	HEX. FLANGE BOLT	68	NUT
17	DOWN WINDING GUARD	69	FAN COVER
18	CYLINDER HEAD SEAL GASKET	70	ONE-WAY CONDUCTOR ASSY
19	INTAKE AND EXHAUST VALVE	71	HEX. FLANGE BOLT
20	LEVER ASSEMBLY	72	HEX. FLANGE BOLT
21	LITER	73	PRESSURE BOARD SCREW
22	PISTON RING ASSY	74	PRESSURE BOARD
23	PISTON PIN	75	PRESSURE BOARD SPRING
24	PISTON PIN CIRCLIP	76	RATCHET
25	PISTON	77	RATCHET SPRING
26	CONNECTION ROD ASSY	78	SPRING
27	VALVE HEAD POSITION PIN	79	RECOIL STARTER REEL
28	OIL DRAIN BOLT WASHER	80	PULLING CORD
29	OIL DRAIN BOLT	81	HANDLE
30	DEEP GROOVE BALLING BEARING 6205	82	REEL COVER
31	CIRCLIP FOR SPEED ADJUSTING SHAFT	83	HEX. FLANGE BOLT
32	SPEED ADJUSTING SHAFT	84	GOVERNOR ROD
33	WASHER	85	TRIMMING SPEED SPRING
34	SPEED GEAR ASSY	86	RESET SPRING
35	WASHER	87	GOVERNOR BASE ASSY
36	SPEED ADJUSTING SHAFT BUSH	88	HEX. FLANGE BOLT
37	OIL SENSOR ASSY	89	GOVERNOR ARM
38	NUT	90	T-SHAPED BOLT
39	HEX. FLANGE BOLT	91	NUT
40	CRANKCASE POSITION PIN	92	GOVERNOR ROD PIN CLAMP
41	CAMSHAFT ASSY	93	WASHER
42	CRANK ASSY	94	GOVERNOR ROD CLAMP
43	CRANKCASE PAPER WASHER	95	STUD BOLT
44	DEEP GROOVE BALLING BEARING 6205	96	INTAKE WASHER
45	OIL LEVEL CAP ASSEMBLY	97	CARBURETOR HEAT INSULATOR
46	OIL LEVEL SEAL	98	(OUT)CARBURETOR WASHER
47	CRANKCASE HIGH COVER	99	CARBURETOR ASSEMBLY
48	OIL SEAL	100	(IN)CARBURETOR WASHER
49	HEX. FLANGE BOLT	101	AIR FILTER ASSEMBLY
50	CRANKCASE	102	NUT
51	OIL DRAIN BOLT WASHER	103	VALVE OIL SEAL
52	OIL DRAIN BOLT	201	RECOIL STARTER