



**PS9308 PS9310**

| NO. | DESCRIPTION                    | NO. | DESCRIPTION                         |
|-----|--------------------------------|-----|-------------------------------------|
| 1   | DELAY TIME SELECTOR            | 33  | SCREW & SPRING WASHER & WASHER      |
| 2   | CIRCUIT BREAKER                | 34  | BREAKER FIXED PLATE                 |
| 3   | NORMAL WORK INDICATOR          | 35  | SCREW                               |
| 4   | EXCESS VOLTAGE INDICATOR       | 36  | LIFT HANDLE                         |
| 5   | LACK VOLTAGE INDICATOR         | 37  | SCREW                               |
| 6   | DELAY TIME INDICATOR           | 38  | BACK BOARD                          |
| 7   | VOLT METER                     | 39  | COVER                               |
| 8   | AMPERE METER                   | 40  | FAN                                 |
| 9   | FRONT BOARD                    | 41  | SELF-TAPPING SCREW                  |
| 10  | BUSH                           | 42  | INPUT/OUTPUT TERMINAL               |
| 11  | SCREW                          | 43  | BOLT & WASHER & SPRING WASHER & NUT |
| 12  | PCB ASSEMBLY                   | 44  | METAL PRESS RING                    |
| 13  | TRANSFORMER ASSEMBLY           | 45  | RUBBER RING & INSULATION PAPER      |
| 14  | INSULATION PAPER & RUBBER RING | 46  | INSULATION PAD                      |
| 15  | RUBBER PRESS RING              | 47  | COMPENSATED TRANSFORMER ASSEMBLY    |
| 16  | DC MOTOR FIXED PLATE           | 48  | COMPENSATED TRANSFORMER BASE        |
| 17  | GEAR BOX COVER                 | 49  | SCREW                               |
| 18  | GEAR BOX BOTTOM                | 50  | CASTER ASSEMBLY                     |
| 19  | BEARING COVER                  | 51  | SAFETY COVER                        |
| 20  | DOUBLE GEAR IV                 | 52  | SCREW                               |
| 21  | BEARING                        | 53  | SAFETY COVER CLAMP                  |
| 22  | CARBON BRUSH DRIVE AXIS        | 54  | CROSS BEAM                          |
| 23  | DOUBLE GEAR II                 | 55  | TRANSFORMER FIXED PLATE             |
| 24  | GEAR MANDRAL                   | 56  | CARBON BRUSH HOLDER ASSEMBLY        |
| 25  | BIG GEAR                       | 57  | CURRENT TRANSFORMER                 |
| 26  | DOUBLE GEAR I                  | 58  | THERMOSTAT                          |
| 27  | DOUBLE GEAR III                | 59  | MICRO-SWITCH ASSEMBLY               |
| 28  | NUT                            | 60  | RELAY                               |
| 29  | BUSH                           | 61  | SCREW                               |
| 30  | LOCATION PIN                   | 62  | CARBON BRUSH                        |
| 31  | DC MOTOR                       | 63  | BUSH                                |
| 32  | TRANSFORMER BASE               |     |                                     |

RU090804-1