



PS9315

NO.	DESCRIPTION	NO.	DESCRIPTION
1	BREAKER FIXED PLATE	32	RUBBER RING & INSULATION PAPER
2	TRANSFORMER ASSEMBLY	33	INSULATION PAD
3	TRANSFORMER BASE	34	COMPENSATED TRANSFORMER ASSEMBLY
4	INSULATION PAPER & RUBBER RING	35	COMPENSATED TRANSFORMER BASE
5	RUBBER PRESS RING	36	SCREW
6	BOLT & NUT	37	COMPENSATED TRANSFORMER FIXED PLATE
7	GEAR BOX FIXED BOARD	38	VOLT METER
8	AC CONTACTOR	39	AMPERE METER
9	GEAR BOX COVER	40	NORMAL WORK INDICATOR
10	GEAR BOX BOTTOM	41	EXCESS VOLTAGE INDICATOR
11	BEARING COVER	42	LACK VOLTAGE INDICATOR
12	BEARING	43	DELAY INDICATOR
13	DOUBLE GEAR IV	44	DELAY TIME SELECTOR
14	DOUBLE GEAR II	45	CIRCUIT BREAKER
15	PCB ASSEMBLY	46	LOCK
16	CARBON BRUSH DRIVE AXIS	47	CASTER ASSEMBLY
17	BUSH	48	RUBBER SEAL
18	GEAR AXIS	49	FRAME
19	DOUBLE GEAR I	50	FAN
20	DOUBLE GEAR III	51	PLASTIC BUCKLE
21	NUT	52	SCREW
22	BUSH	53	WASHER
23	SAMPLING TRANSFORMER	54	SPRING WASHER
24	AC INSTALLATION PLATE	55	INPUT & OUTPUT TERMINAL
25	LOCATION PIN	56	CURRENT TRANSFORMER
26	DC MOTOR	57	THERMOSTAT
27	CARBON BRUSH	58	CARBON BRUSH HOLDER ASSEMBLY
28	BOLT & WASHER & SPRING WASHER	59	MICRO-SWITCH ASSEMBLY
29	TRANSFORMER FIXED PLATE	60	BOLT & NUT
30	BOLT & WASHER & SPRING WASHER & NUT	61	BIG GEAR
31	METAL PRESS RING		

RU090807-1