

PS9350

NO.	DESCRIPTION	NO.	DESCRIPTION
1	COVER	37	SELF-TAPPING SCREW
2	VOLT METER	38	FAN
3	SCREW	39	COUNTERSUNK HEAD SCREW
4	LIFT HANDLE	40	BOLT
5	AMPERE METER	41	SPRING WASHER
6	CIRCUIT BREAKER	42	WASHER
7	DELAY TIME SELECTOR	43	SCREW
8	DELAY TIME INDICATOR	44	SPRING WASHER
9	LACK VOLTAGE INDICATOR	45	WASHER
10	EXCESS VOLTAGE INDICATOR	46	DC MOTOR STAND
11	NORMAL WORK INDICATOR	47	LOCATION PIN
12	RUBBER FOOT	48	BUSH
13	SAFETY COVER	49	DOUBLE GEAR II
14	INPUT&OUTPUT TERMINAL	50	DOUBLE GEAR I
15	SCREW	51	DOUBLE GEAR III
16	COMPENSATED TRANSFORMER ASSEMBLY	52	SMALL GEAR
17	PAPER & INSULATION PAD	53	DC MOTOR
18	METAL PRESS RING	54	COPPER BUSH
19	RUBBER RING	55	GEAR BOX BOTTOM
20	NUT	56	GEAR SPINDLE
21	SPRING WASHER	57	GEAR IV
22	WASHER	58	GEAR LOCATION SLEEVE
23	BOLT	59	CURRENT TRANSFORMER
24	COMPENSATED TRANSFORMER BASE	60	SCREW
25	SCREW	61	GEAR V
26	TRANSFORMER STAND	62	BIG GEAR
27	MICRO-SWITCH ASSEMBLY	63	PCB ASSEMBLY
28	TRANSFORMER ASSEMBLY	64	SCREW
29	CARBON BRUSH HOLDER ASSEMBLY	65	BUSH
30	RUBBER PAD	66	RELAY
31	RUBBER BASE	67	CROSS BEAM
32	SCREW	68	SAFETY COVER CLAMP
33	BREAKER FIXTURE	69	SELF-TAPPING SCREW
34	SCREW	70	DRIVE SPINDLE
35	FRONT BOARD	71	CARBON BRUSH
36	BACK BOARD	72	THERMOSTAT

RU090804-1

