



PW9218

| NO. | DESCRIPTION | NO. | DESCRIPTION |
|-----|--------------------------------|-----|---------------------|
| 1 | HANDLE | 40 | BEARING BRACKET |
| 2 | COVER | 41 | BEARING SHEET |
| 3 | Y-TYPE WATER SEAL | 42 | CAM |
| 4 | SINGLE DIRECTION VALVE | 43 | BEARING |
| 5 | "O" RING | 44 | BIG OIL SEAL |
| 6 | SPRING | 45 | TRANSMISSION SHAFT |
| 7 | SINGLE DIRECTION VALVE MANDRIL | 46 | DUST PROOF COVER |
| 8 | VALVE COVER | 47 | FIXED POSITION PIN |
| 9 | BLOT | 48 | TRANSMISSION BOX |
| 10 | SCREW | 49 | BIG GEAR |
| 11 | "O" RING | 50 | BEARING |
| 12 | VALVE COVER | 51 | SCREW |
| 13 | SINGLE DIRECTION VALVE MANDRIL | 52 | PIN |
| 14 | SPRING | 53 | LEFT HOUSING |
| 15 | SINGLE DIRECTION VALVE | 54 | SMALL GEAR |
| 16 | "O" RING | 55 | "O" RING |
| 17 | COPPER BOLT | 56 | BOLT |
| 18 | "O" RING | 58 | MOTOR COVER |
| 19 | DIRECTING SLEEVE | 59 | "O" RING |
| 20 | SMALL OIL SEAL | 60 | MOTOR REAR COVER |
| 21 | "O" RING | 61 | SCREW |
| 22 | "O" RING | 62 | NUT |
| 23 | PUMB BODY | 63 | "O" RING |
| 24 | PUMB HEAD | 64 | SCREW |
| 25 | ENTER WATER COVER | 65 | "O" RING |
| 26 | WATER NET | 66 | NUT |
| 27 | BIG BOLT | 67 | SWITCH |
| 28 | "O" RING | 68 | WATER PROOF COVER |
| 29 | SPRING | 69 | SWITCH FRAME |
| 30 | VALVE | 70 | RIGHT HOUSING |
| 31 | "O" RING | 71 | MACHINE WHEEL(FEET) |
| 32 | VALVE SLEEVE | 72 | WHEEL COVER |
| 33 | "O" RING | 73 | CORD & PLUG |
| 34 | "O" RING | 74 | CORD SLEEVE |
| 35 | "O" RING | 75 | INSERT SHEET |
| 36 | SPRING | 76 | INSERT SHEET |
| 37 | PILLAR | 77 | CAPACITOR |
| 38 | SPRING BASE | 78 | SCREW |
| 39 | BEARING SLAB | 79 | MOTOR |

RU59901